


# How to Disable the Autaset

This application note describes how to manually disable (or enable) the GDS-1000's Autaset function.

## Procedure

1. Turning on the GDS-2000      Power the GDS-2000 up.
2. Accessing the factory menu      Press the front panel keys in the following order.

combination keys: **F4** + **CH1** + **Run/Stop** key.

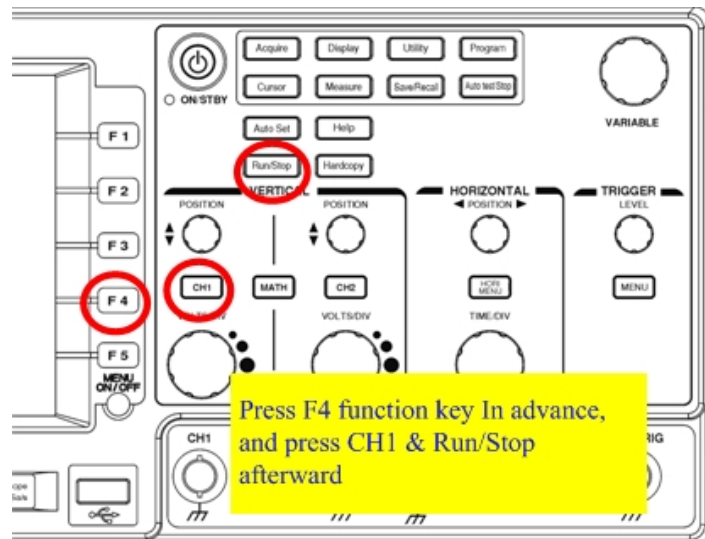

- f. The user service mode is appeared when the combination keys pressed successful.

