
Digital Storage Oscilloscope

GDS-2000 Series

USER MANUAL

GW INSTEK PART NO. 82DS-22040MB1



ISO-9001 CERTIFIED MANUFACTURER

GW INSTEK

This manual contains proprietary information, which is protected by copyrights. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will company.

The information in this manual was correct at the time of printing. However, Good Will continues to improve products and reserves the rights to change specification, equipment, and maintenance procedures at any time without notice.

Good Will Instrument Co., Ltd.
No. 7-1, Jhongsing Rd., Tucheng City, Taipei County 236, Taiwan.

Table of Contents

SAFETY INSTRUCTIONS 5

GETTING STARTED..... 9

GDS-2000 Series Overview 10

Appearance 13

Set Up..... 21

QUICK REFERENCE..... 25

Menu Tree / Operation Shortcuts..... 26

Default Settings 44

Built-in Help 45

MEASUREMENT..... 46

Basic Measurement 47

Automatic Measurement..... 54

Cursor Measurement 59

Math Operation 63

Go-NoGo Test 68

Program..... 77

CONFIGURATION 82

Acquisition 84

Display..... 90

Horizontal View 94

Vertical View (Channel)..... 101

Trigger 105

System Info / Language / Clock 115

SAVE/RECALL118

File Format/Utility 119

Quick Save (HardCopy)..... 125

Save 127

Recall 136

PRINT OUT.....145

REMOTE CONTROL CONFIG148

Interface Configuration 149

BATTERY OPERATION155

MAINTENANCE157

Vertical Resolution Calibration 157

Probe Compensation..... 158

FAQ160

APPENDIX163

Fuse Replacement 163

GPIB Module Installation..... 164

GDS-2000 Specification..... 165

Probe Specification 168

Declaration of Conformity..... 169







INDEX.....170

S SAFETY INSTRUCTIONS

This chapter contains important safety instructions that you must follow when operating GDS-2000 and when keeping it in storage. Read the following before any operation to insure your safety and to keep the best condition for GDS-2000.

Safety Symbols

These safety symbols may appear in this manual or on GDS-2000.

	WARNING	Warning: Identifies conditions or practices that could result in injury or loss of life.
	CAUTION	Caution: Identifies conditions or practices that could result in damage to GDS-2000 or to other properties.
	DANGER	High Voltage
	Attention	Refer to the Manual
	Protective Conductor Terminal	
	Earth (ground) Terminal	

Safety Guidelines

General Guideline



- Make sure the BNC input voltage does not exceed 300V peak.
- Never connect a hazardous live voltage to the ground side of the BNC connectors. It might lead to fire and electric shock.
- Do not place any heavy object on GDS-2000.
- Avoid severe impacts or rough handling that leads to damaging GDS-2000.
- Do not discharge static electricity to GDS-2000.
- Use only mating connectors, not bare wires, for the terminals.
- Do not block the cooling fan opening.
- Do not perform measurement at power source and building installation site (Note below).
- Do not disassemble GDS-2000 unless you are qualified.

(Measurement categories) EN 61010-1:2001 specifies the measurement categories and their requirements as follows. GDS-2000 falls under category II.

- Measurement category IV is for measurement performed at the source of low-voltage installation.
- Measurement category III is for measurement performed in the building installation.
- Measurement category II is for measurement performed on the circuits directly connected to the low voltage installation.
- Measurement category I is for measurements performed on circuits not directly connected to Mains.

Power Supply



- AC Input voltage: 100 ~ 240V AC, 47 ~ 63Hz
- The power supply voltage should not fluctuate more than 10%.
- Connect the protective grounding conductor of the AC power cord to an earth ground, to avoid electrical shock.

Fuse



WARNING

- Fuse type: T2A/250V
- Make sure the correct type of fuse is installed before power up.
- To ensure fire protection, replace the fuse only with the specified type and rating.
- Disconnect the power cord before fuse replacement.
- Make sure the cause of fuse blowout is fixed before fuse replacement.

Cleaning GDS-2000

- Disconnect the power cord before cleaning.
- Use a soft cloth dampened in a solution of mild detergent and water. Do not spray any liquid.
- Do not use chemical containing harsh material such as benzene, toluene, xylene, and acetone.

Operation Environment

- Location: Indoor, no direct sunlight, dust free, almost non-conductive pollution (Note below)
- Relative Humidity: < 80%
- Altitude: < 2000m
- Temperature: 0°C to 50°C

(Pollution Degree) EN 61010-1:2001 specifies the pollution degrees and their requirements as follows. GDS-2000 falls under degree 2.

Pollution refers to "addition of foreign matter, solid, liquid, or gaseous (ionized gases), that may produce a reduction of dielectric strength or surface resistivity".

- Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence.
- Pollution degree 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.
- Pollution degree 3: Conductive pollution occurs, or dry, non-conductive pollution occurs which becomes conductive due to condensation which is expected. In such conditions, equipment is normally protected against exposure to direct sunlight, precipitation, and full wind pressure, but neither temperature nor humidity is controlled.

Storage environment

- Location: Indoor
- Relative Humidity: < 85%
- Temperature: 0°C to 50°C

Power cord for the United Kingdom

When using GDS-2000 in the United Kingdom, make sure the power cord meets the following safety instructions.

NOTE: This lead/appliance must only be wired by competent persons




WARNING: THIS APPLIANCE MUST BE EARTHED

IMPORTANT: The wires in this lead are coloured in accordance with the following code:

Green/ Yellow: Earth
 Blue: Neutral
 Brown: Live (Phase)



As the colours of the wires in main leads may not correspond with the colours marking identified in your plug/appliance, proceed as follows: The wire which is coloured Green & Yellow must be connected to the Earth terminal marked with the letter E or by the earth symbol  or coloured Green or Green & Yellow.

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Blue or Black.

The wire which is coloured Brown must be connected to the terminal marked with the letter L or P or coloured Brown or Red.

If in doubt, consult the instructions provided with the equipment or contact the supplier.

This cable/appliance should be protected by a suitably rated and approved HBC mains fuse: refer to the rating information on the equipment and/or user instructions for details. As a guide, cable of 0.75mm² should be protected by a 3A or 5A fuse. Larger conductors would normally require 13A types, depending on the connection method used.

Any moulded mains connector that requires removal /replacement must be destroyed by removal of any fuse & fuse carrier and disposed of immediately, as a plug with bared wires is hazardous if engaged in live socket. Any re-wiring must be carried out in accordance with the information detailed on this label.

GETTING STARTED

This chapter describes GDS-2000 in a nutshell, including its main features and front / rear panel introduction. After going through the overview, follow the Set Up section to properly set up operation environment.



GDS-2000 series overview	Series lineup	10
	Main Features	11
	Package Contents	12
Appearance	GDS-2064/2104/2204 Front Panel	13
	GDS-2062/2102/2202 Front Panel	13
	Rear Panel	17
	Display	19
Set Up	Tilt stand	21
	Power up	22
	First Time Use	23

GDS-2000 Series Overview

Series lineup


GDS-2000 series consists of 6 models, divided into 2-channel and 4-channel versions.

Model name	Frequency bandwidth	Input channels	Ext. trigger input	Advanced delay trigger
GDS-2062	60MHz	2	Yes	Yes
GDS-2102	100MHz	2	Yes	Yes
GDS-2202	200MHz	2	Yes	Yes
GDS-2064	60MHz	4	No	No
GDS-2104	100MHz	4	No	No
GDS-2204	200MHz	4	No	No

The differences between 2 and 4 channel model appearance are in the horizontal key, trigger key, variable knob, and external trigger input layout.

2-Channel model

4-Channel model

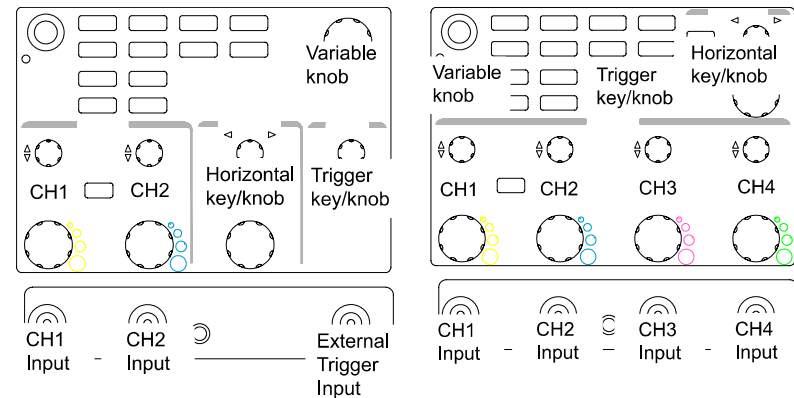


Main Features

Performance	<ul style="list-style-type: none"> • High sampling rate: up to 1GS/S real-time, 25GS/s equivalent-time • Deep memory: 25k points record length • Minimum 10ns peak detection
Feature	<ul style="list-style-type: none"> • Wide selection range: 60MHz to 200MHz bandwidth, 2 or 4 channels • Powerful display: 5.6 in. color TFT, wide viewing angle, 8x12 divisions waveform support • Battery operation • Automatic measurements: maximum 27 types • FFT analysis • Triggers: Edge, Video, Pulse Width • Advanced Delay trigger (for 2CH model only) • Program and play mode • Color printout of display contents • Go-No Go test • Built-in Help
Interface	<ul style="list-style-type: none"> • USB host port: front and rear panel, to printers and storage devices • USB slave port, RS-232C port, GPIB port (option): for remote control • USB slave port for PC software connection • Calibration output • Go-No Go output • External trigger input (for 2CH model only)

Package Contents

Check the contents before using GDS-2000.

Opening the box

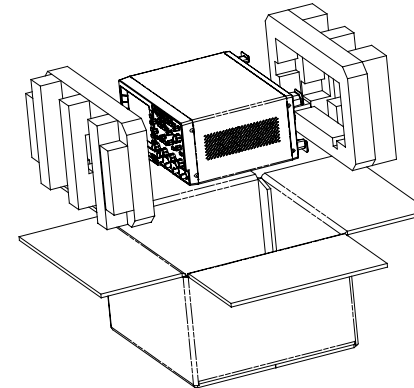


Contents	<ul style="list-style-type: none"> • Main unit • Probe set <ul style="list-style-type: none"> GDS-2062: GTP-060A x 2 GDS-2064: GTP-060A x 4 GDS-2102: GTP-100A x 2 GDS-2104: GTP-100A x 4 GDS-2202: GTP-250A x 2 GDS-2204: GTP-250A x 4 • Power cord • User manual (this document)
----------	---


Note	<ul style="list-style-type: none"> • For detailed specification of probe, see page168. • Program manual, PC software, and USB driver are downloadable from GWInstek website. Visit www.gwinstek.com.tw, GDS-2000 corner.
------	---

Appearance

GDS-2064/2104/2204 Front Panel

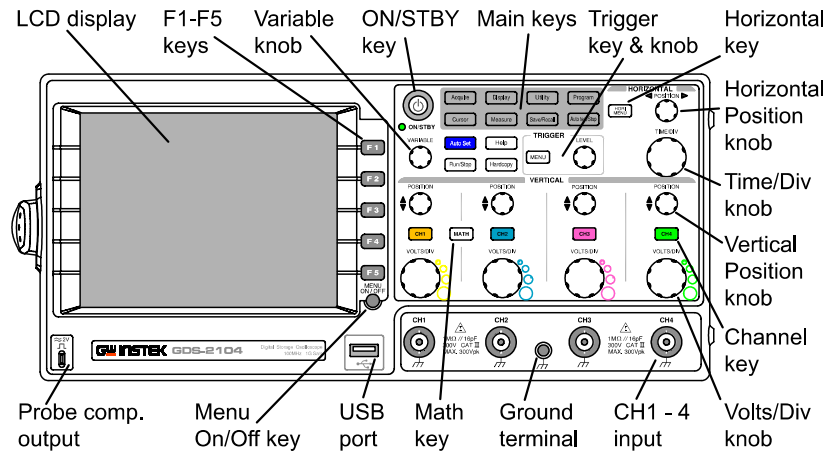



GDS-2062/2102/2202 Front Panel

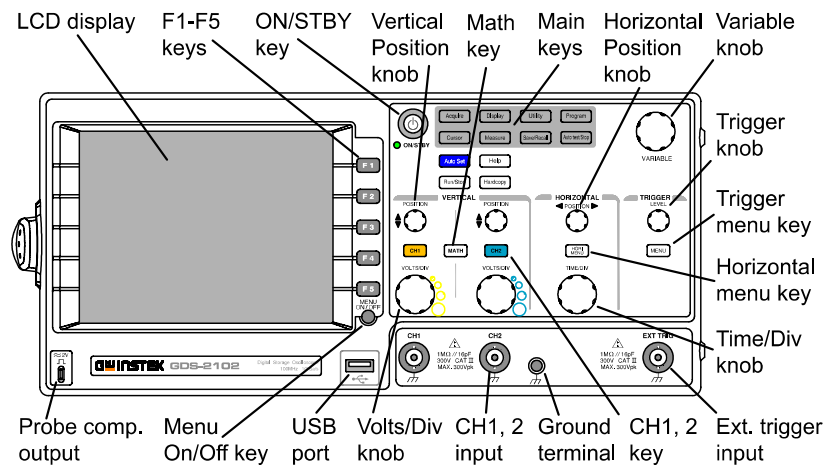


LCD display TFT color, 320 x 234 resolution, wide angle view LCD display.


F1 ~ F5 function keys  Activates the functions which appear on the left side of the LCD display.


Variable knob  VARIABLE Increases/decreases value or moves to the next/previous parameter.

On/Standby key  ON/STBY Switches between the power On state (green indicator) and standby state (red indicator). For power up sequence, see page22.











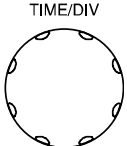
Acquire key  Acquire Configures acquisition mode (page84).











Display key  Display Configures display settings (page90).

Utility key  Utility Configures or shows hardcopy (page125), printer configuration (page145), interface (page149), system info (page115), date/time (page116), menu language (page115), Go-No Go (page68), calibration (page157), and probe compensation (page158).


Hardcopy key  Hardcopy Prints out display image (page145) or transfers data to USB flash drive (page125).

Program key + Auto test key  Program Edits, runs, and stops program operation (page77).


Cursor key		Configures and runs cursor measurements (page59).
Measure key		Configures and runs automatic measurements (page54).
Help key		Shows Help contents on the LCD display (page45).
Save/Recall key		Saves and recalls waveform, image, and panel setup (page118).
Auto Set key		Finds signals and sets the appropriate horizontal / vertical / trigger settings (page48).
Run/Stop key		Freezes (Stop) or continues (Run) signal acquisition (page49).
Trigger menu key		Configures trigger settings (page105).
Trigger knob		Sets trigger level (page105).
Horizontal menu key		Configures horizontal view (page94).
Horizontal position knob		Sets the horizontal position of waveforms (page94).
Time/Div knob		Selects the horizontal scale (page95).

Vertical position knob		Sets the vertical position of waveforms (page101).
Channel menu key		Configures the vertical scale and coupling mode for each channel (page101).
Volts/Div knob		Selects the vertical scale (page101).
Input terminal		Accepts input signals. Input impedance: $1M\Omega \pm 2\%$.
Ground terminal		Accepts the DUT ground lead for common ground.
Math key		Configures and runs math operation (page63).
USB host port		TypeA, 1.1/2.0 compatible. Prints out display image (page145) or transfers data (page118).
Menu On/Off key		Shows or hides menu in the LCD display (page93).
Probe compensation output		Outputs 2Vp-p, square signal for probe compensation (page158) or demonstration. Can be used for generic purpose (page52) as well.
External trigger input		For 2ch model only. Accepts external trigger signal (page105). Input impedance: $1M\Omega \pm 2\%$.


Rear Panel

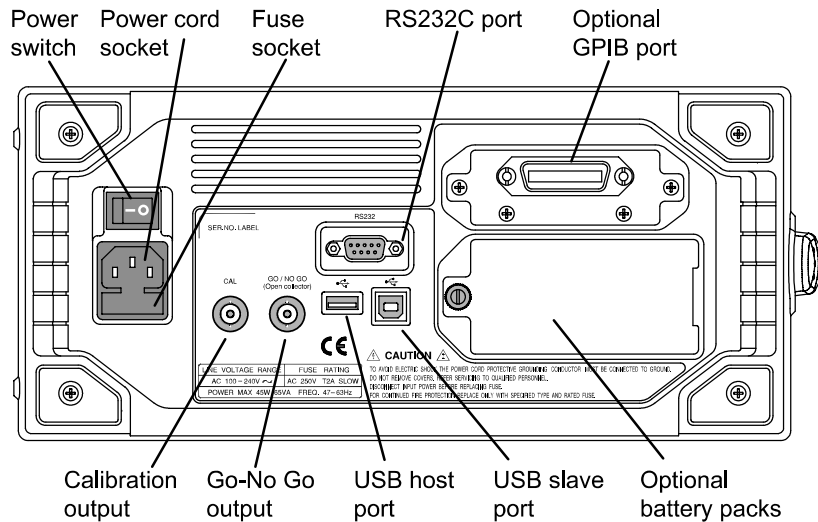


- Power switch**



Power switch turns the main power On (I) / Off (O).
- Power cord socket**




Power cord socket accepts AC mains, 100 ~ 240V, 50/60Hz.
- Fuse socket**




Fuse socket holds AC main fuse, T2A/250V.

For power up sequence, see page22.
For fuse replacement procedure, see page163.
- RS232C port**




Accepts DB-9 RS-232C connector for remote control (page150).
- GPIB port (optional)**




Accepts 24 pin male GPIB connector for remote control (page152).

- Battery packs (optional)**

Holds 2 packs of Li-Ion battery for portable usage (page155).
- USB slave port**




Accepts typeB connector for remote control (page149) or PC software connection. USB 1.1/2.0 full speed compatible.
- USB host port**




Accepts typeA connector for display image printout (page145) or data transfer (page118). Simultaneous use with the front panel host port is not allowed. TypeA, 1.1/2.0 full speed compatible.
- Go-No Go output**

GO / NO GO (Open collector)




Outputs Go-No Go test result (page68) as 10us pulse signal.
- Calibration output**

CAL



Outputs the signal for vertical scale accuracy calibration (page157).

Display

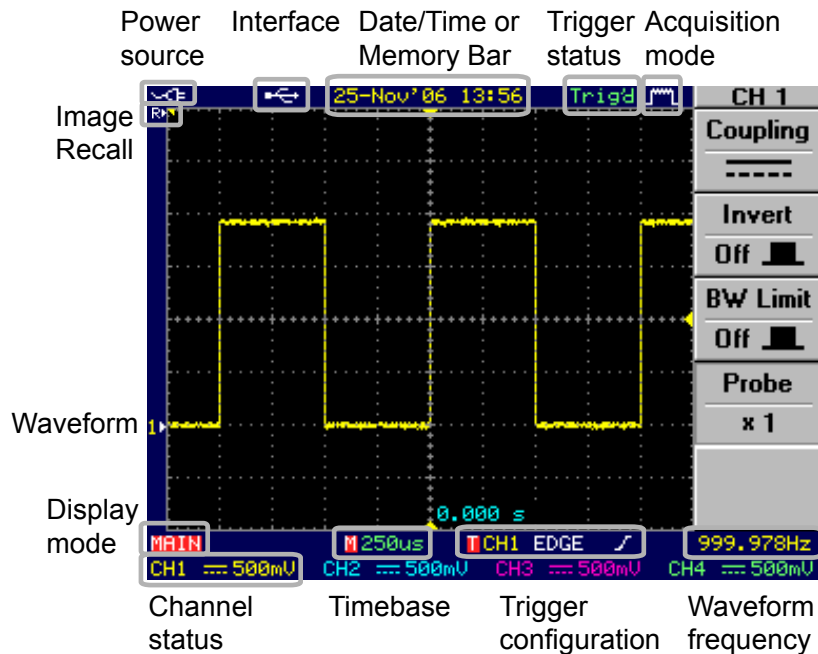

Waveforms	Shows input signal waveforms.	
	Channel 1: Yellow	Channel 2: Blue
	Channel 3: Pink	Channel 4: Green

Power source		AC main is the source.
		Battery (page155) is the source.
		AC main is the source: battery is installed as well.

Image recall		The "R" indicator shows that the display shows pre-recorded image, not signal waveform.
--------------	--	---


Interface Shows the active interface for remote connection (page148) and PC software connection.

		USB
		RS-232C
		GPIB (optional)
Date/Time		07-Jan'06 14:53 Current date and time (page116).
Memory bar		The ratio and the position of the displayed waveform compared with the internal memory (page94).
Trigger status		Trigd Triggered.
		Trig? Not triggered, display not updated.
		Auto Not triggered, display updated.
		STOP Trigger stopped. Also appears in Run/Stop (page49).
		For trigger details, see page105.
Acquisition mode		Normal mode
		Peak detect mode
		Average mode
		For acquisition details, see page84.
Input signal frequency		999.979Hz Shows the input signal frequency.
	<20Hz icon"/>	<20Hz Indicates the frequency is less than 20Hz (lower frequency limit).
Trigger configuration		CH1 EDGE Trigger source, type, slope. (Video trigger)
		CH1 VIDEO P trigger source, polarity.
		For trigger details, see page105.
Channel status		CH1 500mV Channel 1, bw limit On, DC coupling, 500mV/Div
		CH1 ~ 500mV Channel 1, bw limit Off, AC coupling, 500mV/Div
		For channel details, see page101.


Set Up

Tilt stand

Low angle

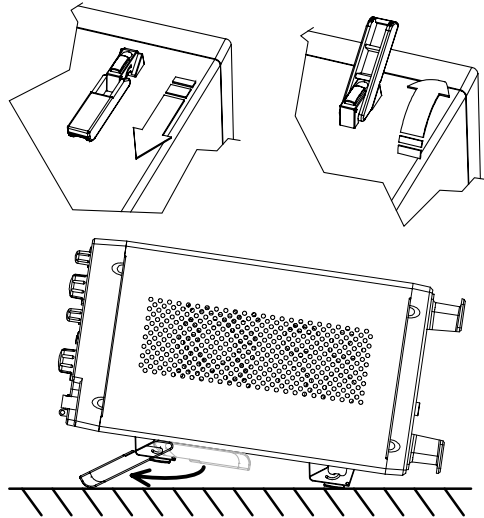





High angle

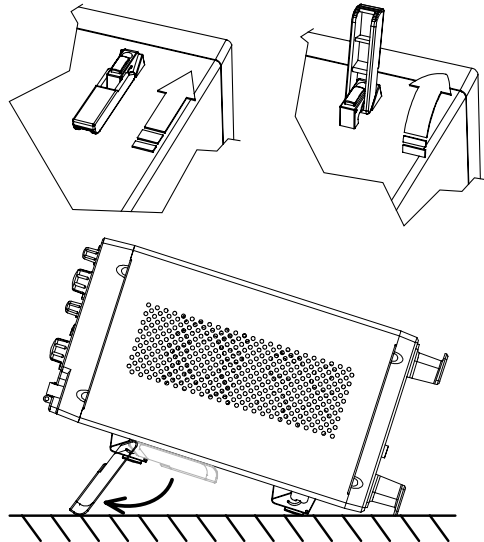

Power up

Step

1. Connect the power cord to the rear panel socket. (No need when using the battery).
2. Turn On the main power switch. **I** : On, **O** : Off.
3. The ON/STBY indicator on the front panel turns red.
4. Press the ON/STBY key. The indicator turns green and the display becomes active in 6 ~ 8 seconds.
5. The power icon on the upper left corner of the display shows the power source. When both AC mains and battery are available, AC mains is automatically selected.

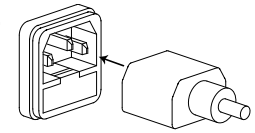

Note


GDS-2000 recovers the state right before the power OFF. The default setting can be recovered by pressing the Save/Recall key → F1 (Default Setup). For details, see page136.

First Time Use


Background This section describes how to connect a signal, adjust the scale, and compensate the probe. Before operating GDS-2000 in a new environment, run these steps to make sure the instrument is functionally stable and that you are comfortable operating it.

1. Power On Follow the procedure on the previous page.


2. Reset system Reset the system by recalling the factory setting. Press the Save/Recall key, then F1 (Default Setup). For factory setting details, see page44.

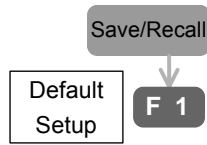


2. Connect probe Connect the probe to Channel1 input terminal and probe compensation signal output (2Vp-p, 1kHz square wave). Set the probe attenuation to x10.

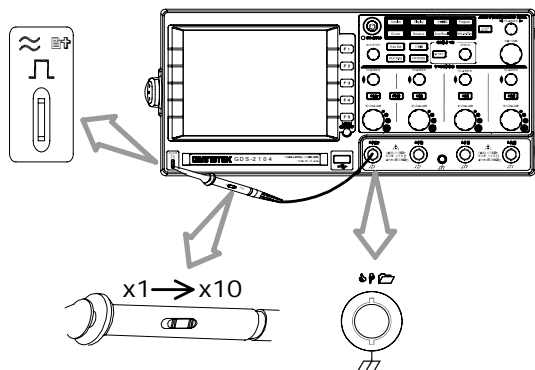


3. Capture signal (Auto Set) Press the Auto Set key. A square waveform appears on the center of the waveform. For Auto Set details, see page48.

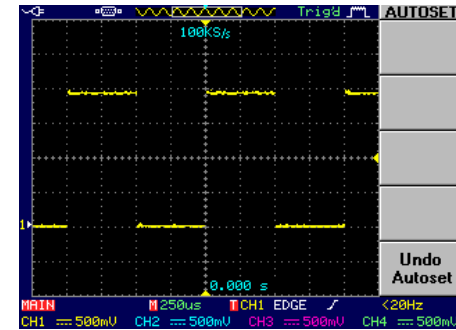

4. Select vector waveform Press the Display key, then F1 (Type) twice to select the vector waveform.

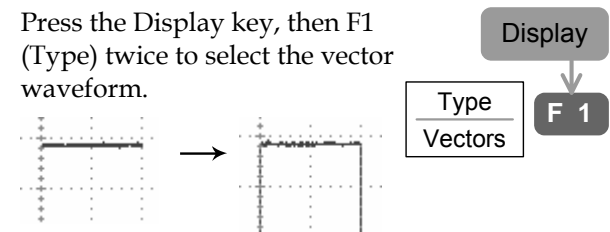

5. Compensate probe Turn the adjustment point on the probe to make the square waveform edge flat.

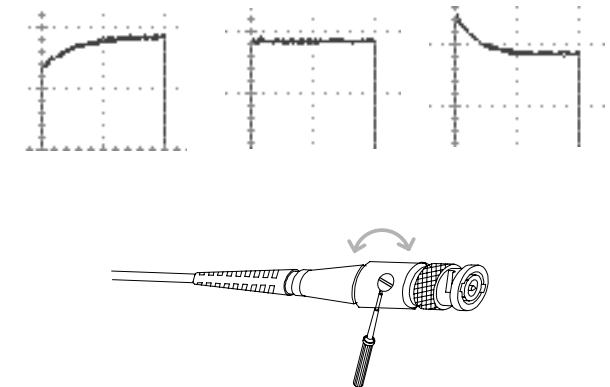

6. Start operation Continue with the other operations.
 Measurement: page46 Configuration: page82
 Remote control: page148

QUICK REFERENCE

This chapter describes GDS-2000 menu tree, shortcuts to major operations, built-in Help access, and default factory settings. Use them as a handy reference to get a quick access to the functionality.


Menu tree / shortcut	Convention	26
	Acquire key	26
	Auto Set key	26
	Auto test/Stop key	27
	CH1 ~ 4 key	27
	Cursor key	27
	Display key	28
	Hardcopy key	28
	Help key	28
	Horizontal menu key	28
	Math key (1/2)	29
	Measure key (1/2)	30
	Program key (1/2)	31
	Run/Stop key	31
	Save/Recall key (1/9)	32
	Trigger key (1/5)	36
	Utility key (1/9)	38
Default setup	Default Settings	44
Help	Built-in Help	45

Menu Tree / Operation Shortcuts

Convention

- F1 = Press F1
- F1↺ = Press F1 repeatedly
- F1 ~ F4 = Select one from F1 to F4 and press it
- F1 VAR ⌚ = Press F1, then use the Variable knob
- Auto Set = Press the function key itself (AutoSet in this case)

Acquire key

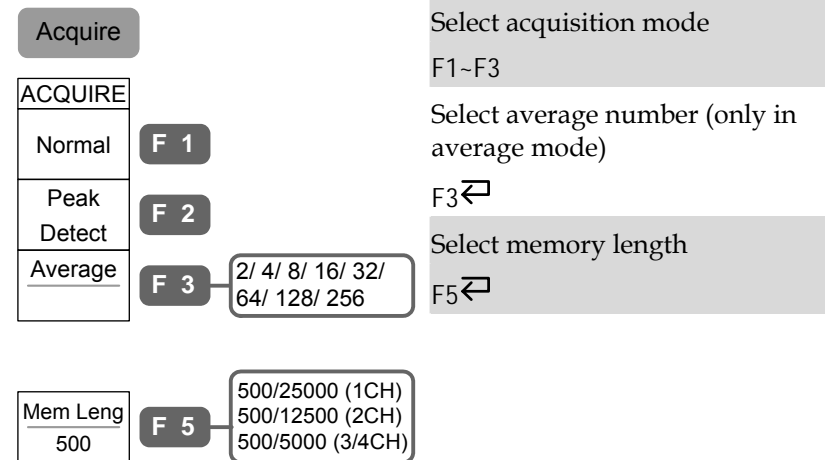

Auto Set key

- Auto Set**: Automatically find signal and Auto Set set scale.
- Undo Auto Set (available for 5 F5 seconds)

Auto test/Stop key

Auto test/Stop → See Program key (page31)

CH1 ~ 4 key

CH1		Select coupling mode F1 ↵
Coupling -----	F 1 ~ / --- / ↗	Turn waveform invert On/Off F2 ↵
Invert Off []	F 2 On/ Off	Turn bandwidth limit On/Off F3 ↵
BW Limit Off []	F 3 On/ Off	Select probe attenuation factor F4 ↵
Probe x1	F 4 x1/ x10/ x100	

Cursor key

Cursor		Select cursor source channel F1 ↵
CURSOR Source CH1	F 1 (4CH) CH1/ 2/ 3/ 4/ MATH (2CH) CH1/ 2/ MATH	Select active horizontal cursor F2 ↵
Horizontal 	F 2 /	Select active vertical cursor F3 ↵
Vertical -----	F 3 ----- / -----	
T ₁ : -236.0us T ₂ : 160.0us Δ: 396.0us f: 2.525kHz	F 4	
V ₁ : 1.54V V ₂ : -460mV Δ: 2.00V	F 5	

Display key

Display		Select waveform display type F1 ↵
DISPLAY Type Dots	F 1 Vectors/ Dots	Waveform accumulation On/Off F2 ↵, F3 (display refresh when On)
Accumulate Off []	F 2 On/ Off	Set display contrast F4 VAR []
Refresh	F 3	Select display grid F5 ↵
Contrast - [] +	F 4	
[] / [] / []	F 5 [] / [] / []	

Hardcopy key

Hardcopy → See Utility key (page38)


Help key

Help → Turn help mode On/Off Help


Horizontal menu key

HORI MENU		Select main (default) display F1
Hor.MENU Main	F 1	Select Window mode and zoom F2 TIME/DIV [] , F3
Window	F 2	Select windows roll mode F4
Window Zoom	F 3	Select XY mode F5
Roll	F 4	
XY	F 5	


Math key (1/2)

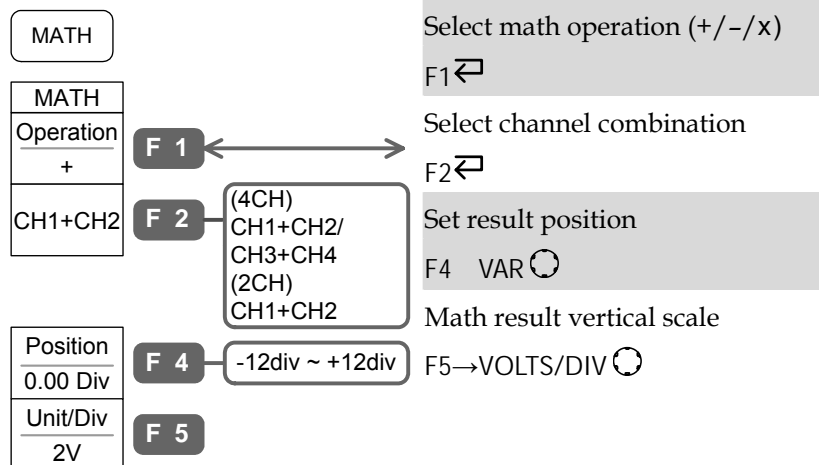


Math key (2/2)

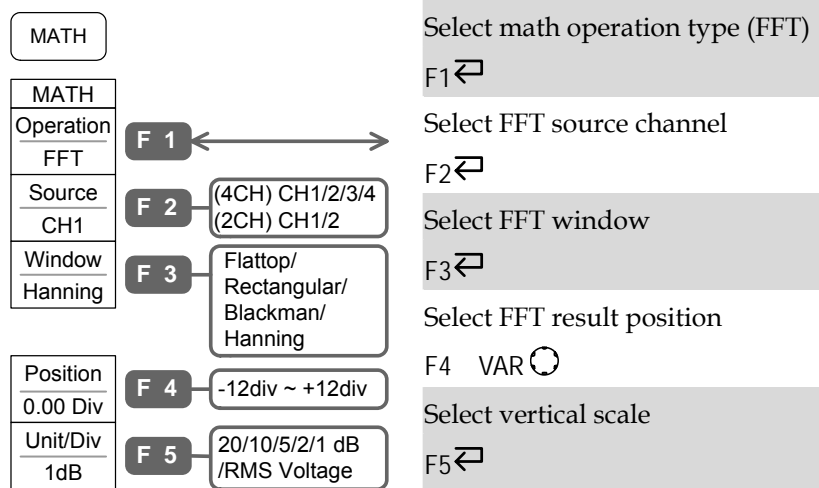


Measure key (1/2)

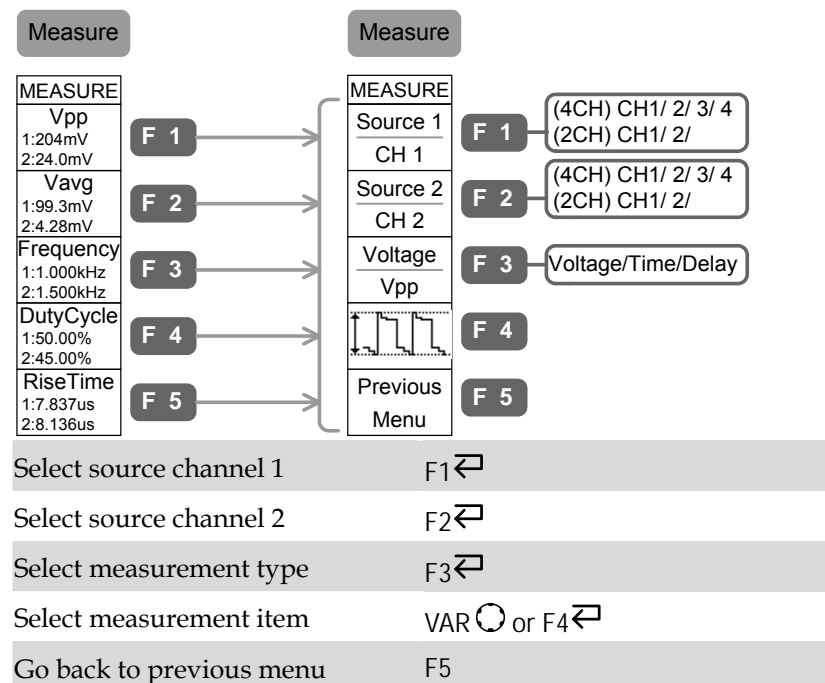


Measure key (2/2)

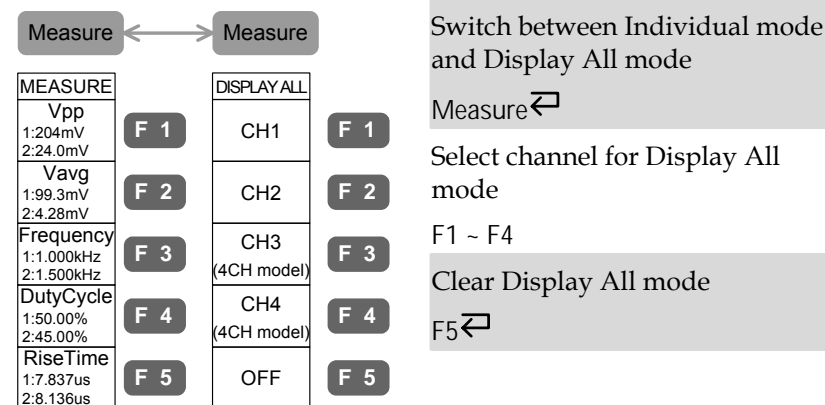


Program key (1/2)

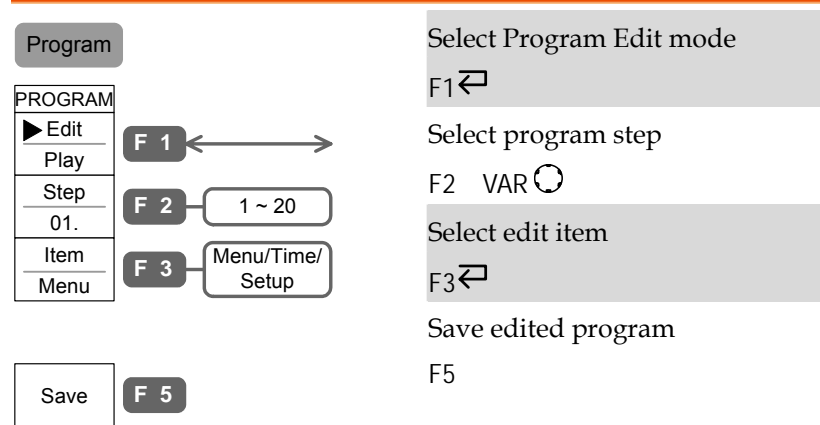


Program key (2/2)

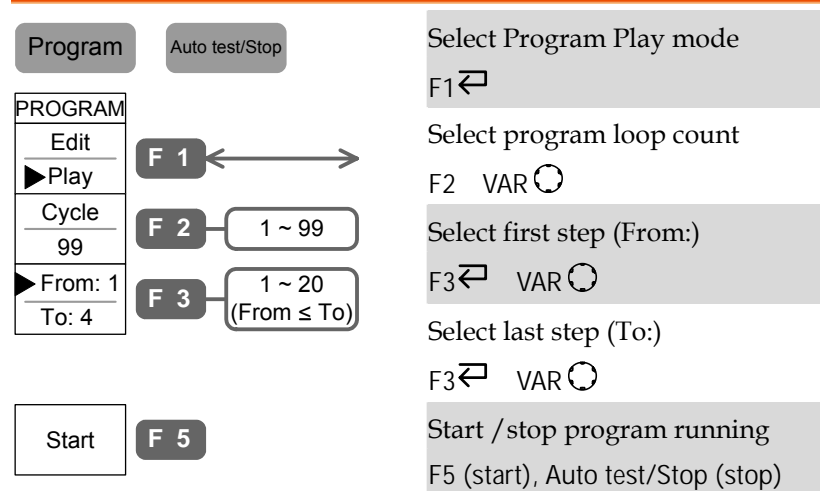


Run/Stop key

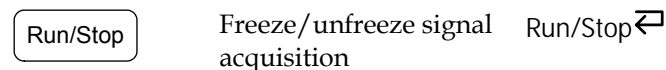

Save/Recall key (1/9)

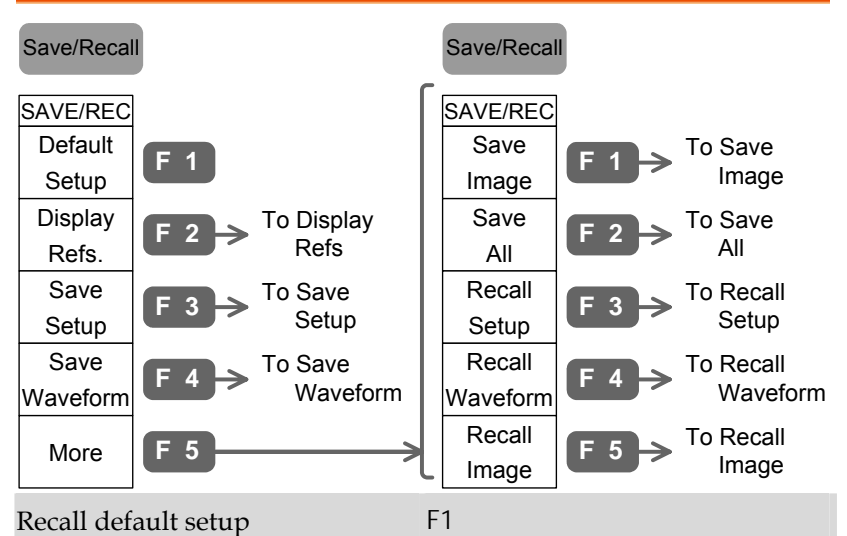

Save/Recall key (2/9)

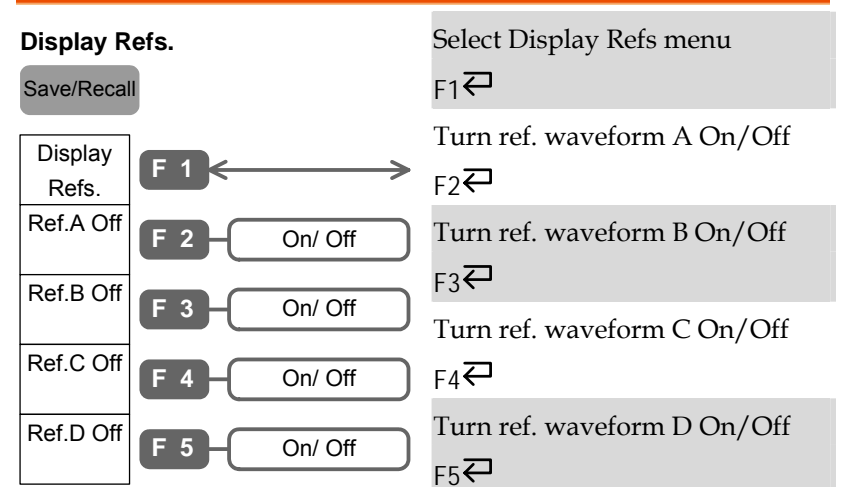

Save/Recall key (3/9)

Save Setup		Select Save Setup menu
Save/Recall		F1 ↵
Save Setup	F 1 ↔	Select destination
		F3 ↵ VAR ⌚
Destination	F 3 → Memory/USB	Save setup
USB		F4
Save	F 4	Go to USB flash drive contents edit mode
File Utilities	F 5 → (USB only) To File Utilities	F5

Save/Recall key (4/9)

Save Waveform		Select Save Waveform menu
Save/Recall		F1 ↵
Save Waveform	F 1 ↔	Select waveform source
Source	F 2 → (4CH) CH1/2/3/4 Ref A/B/C/D (2CH) CH1/2 Ref A/B/C/D	F2 ↵
Destination	F 3 → Memory/USB/Refs.	Select waveform destination
USB		F3 ↵ VAR ⌚
Save	F 4	Save waveform
File Utilities	F 5 → (USB only) To File Utilities	F4
		Go to USB flash drive contents edit mode
		F5

Save/Recall key (5/9)

Save All		Select Save All menu
Save/Recall		F1 ↵
Save All	F 1 ↔	Turn ink saver On/Off
Ink Saver	F 2 → On/ Off	F2 ↵
Off		Select destination
Destination	F 3 →	F3 ↵ VAR ⌚
USB		Save all
Save	F 4	F4
File Utilities	F 5 → (USB only) To File Utilities	Go to USB flash drive contents edit mode
		F5

Save/Recall key (6/9)

Recall Setup		Select Recall Setup menu
Save/Recall		F1 ↵
Recall Setup	F 1 ↔	Select setup source
Source	F 2 → USB/Memory	F2 ↵ VAR ⌚
USB		Recall setup
		F4
Recall	F 4	Go to USB flash drive contents edit mode
File Utilities	F 5 → (USB only) To File Utilities	F5

Save/Recall key (7/9)

Recall Waveform		Save/Recall	
		F1	Select Recall Waveform menu
		F2	Select waveform source
Recall Waveform	F1 ↔ F2	VAR	
Source	F2	USB/Memory	Select waveform destination
USB		F3	VAR
Destination	F3		Recall waveform
Recall	F4		F4
File Utilities	F5	(USB only) To File Utilities	Go to USB flash drive contents edit mode
		F5	

Save/Recall key (8/9)

Recall Image		Save/Recall	
		F1	Select Recall Image menu
		F2	Select image source
Recall Image	F1 ↔ F2	VAR	
Source	F2		Show or recall image
USB		F3	
Ref Image On	F3		Recall image
Recall	F4		F4
File Utilities	F5	To File Utilities	Go to USB flash drive contents edit mode
		F5	

Save/Recall key (9/9)

File Utilities		Save/Recall	
		F1	Select file/folder or enter into sub folder
		F2	VAR
FILE UTILS		F1	Create new folder or rename folder/file
Select	F1	KEYPAD Enter Character	
New Folder	F2	KEYPAD Back Space	F2,F3 (Enter new folder or rename menu)
Rename	F3		VAR F1 (Enter character)
Delete	F4	KEYPAD Save	F2 (Backspace)
Previous Menu	F5	KEYPAD Previous Menu	F4 (Save new folder)
			F5 (Go back to previous menu)
			Delete folder/file
			F4

Trigger key (1/5)

Video		Save/Recall	
MENU		F1	Select Video trigger type
TRIGGER Type Video	F1		Select trigger source
Source CH1	F2	(4CH) CH1/2/3/4 (2CH) CH1/2	F2
Standard NTSC	F3	NTSC/SECAM/PAL	Select video standard
Polarity	F4	[Pulse Diagrams]	F3
Line	F5	Field 1/ Field 2 1~263 (NTSC) 1~313 (SECAM/PAL)	Select video polarity
			F4
			Select video line
			F5
			VAR





Trigger key (2/5)

Edge/Pulse		Select Edge/Pulse trigger type
MENU		F1 ↵
TRIGGER		Select trigger source
Type Pulse	F 1 ↔ F2 ↵	F2 ↵
Source CH1	F 2 (4CH) CH1/2/3/4/Line (2CH) CH1/2/Ext/Line	Select trigger mode F3 ↵
Mode Auto	F 3 Auto/ Normal/ Single	Select pulse trigger condition and pulse width F4 ↵ VAR ⌚
When < 20.0ns	F 4 >/ </ =/ ≠ 20ns~200us	Go to slope/coupling menu F5
Slope / Coupling	F 5 → To Slope/Coupling	





Trigger key (3/5)

(2CH Only)		Select Delay trigger type
MENU		F1 ↵
TRIGGER		Select time delay mode and delay length
Type Delay	F 1 ↔ F2 VAR ⌚	F2 VAR ⌚
By Time 100ns	F 2 100ns~1.3ms	Select event delay mode and event count
By Event 2	F 3 2 ~ 65000	F3 VAR ⌚
Ext: TTL	F 4 TTL: 1.48V/ ECL: -1.35V User: -12~+12V	Select external trigger type and adjust trigger level (User type) F4 VAR ⌚
Slope/ Coupling	F 5 → To Slope/Coupling	Go to slope/coupling menu F5



Trigger key (4/5)

Slope/Coupling		Select trigger slope type
MENU		F1 ↵
TRIGGER		Select trigger coupling mode
Slope	F 1 	F2 ↵
Coupling	F 2 	Select Frequency Rejection F3 ↵
Rejection Off 	F 3 LF/ HF/ Off	Turn Noise Rejection On/Off F4 ↵
Noise Rej Off 	F 4 On/ Off	Go back to previous menu F5
Previous Menu	F 5	



Trigger key (5/5)

		Set Holdoff time
		F1 VAR ⌚
		Set Holdoff time to minimum
		F2
		Turn Auto Level trigger On/Off
		F5 ↵
		


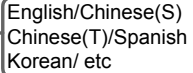


Utility key (1/9)

Utility		Go to Hardcopy menu
	F1	F1
UTILITY		Go to Interface menu
Hardcopy Menu	F 1 → To Hardcopy menu	F2
Interface Menu	F 2 → To Interface menu	Select buzzer sound
Off	F 3  / Off	F3 ←
Language English	F 4 	Select language
More	F 5 ←	F4 ←
		Go to other menu
		F5 ←







Utility key (2/9)

Utility		Start Vertical calibration
	F1 → F1	F1 → F1
UTILITY		Show system information
Self CAL Menu	F 1 	F2
System Info.	F 2	Go to Go-NoGo menu
Go-NoGo Menu	F 3 → To Go-NoGo menu	F3 ←
NoGoWhen	F 4 	Select NoGo condition
More	F 5 ←	F4 ←
		Go to other menu
		F5

Utility key (3/9)

Hardcopy		Select Hardcopy function
UTILITY		F1 ←
H-COPY		Turn Ink Saver On/Off
Function Save All	F 1 	F2 ←
Ink Saver Off	F 2 	Select printout color (only in printout mode)
Gray Portrait	F 3 	F3 ←
Ratio 50%	F 4 	Select printout ratio (only in printout mode)
Previous Menu	F 5	F4 ←
		Run Hardcopy
		Hardcopy

Utility key (4/9)

Interface		Select interface
UTILITY		F1 ←
Type RS232	F 1 	Select GPIB address
Address 1	F 2 	F2 VAR 
Baud Rate 9600	F 2 	Select RS-232C baud rate
Stop Bit 2	F 3 	F2 ←
Parity None	F 4 	Select RS-232C stop bit
Previous Menu	F 5	F3 ←
		Select RS-232C parity
		F4 ←

Utility key (5/9)

Go-NoGo		Go to Go-NoGo template menu
Utility		F1
Go-NoGo Template Edit	F 1 → To Go-NoGo Template menu	Select Go-NoGo source channel
Source CH1	F 2 → (4CH) CH1/ 2/ 3/ 4 (2CH) CH1/ 2	F2 ←
Violating Stop	F 3 → STOP / STOP+ [] Continue / Cont.+ []	Select violating condition
Go-NoGo Off	F 4 → On/ Off	F3 ←
Ratio: 0	F 5	Start/Stop Go-NoGo test
0		F4 ←
		Go-NoGo test result
		F5

Utility key (6/9)

Go-NoGo Template		Select template
Utility		F1 ←
Template Max	F 1 → Max/ Min/Auto	Select template source
Source RefA	F 2 → (Max/Min template) Max: Ref A/ W1~20 Min: Ref B/ W1~20	F2 ← VAR ○
Source CH1	F 2 → (Auto template) (4CH) CH1/ 2/ 3/ 4 (2CH) CH1/ 2	Select template position or tolerance
Position 3.00 Div	F 3 → (Max/Min template) -12Div ~ +12Div	F3 ← VAR ○
Tolerance 0.4%	F 3 → (Auto template) 0.4% ~ 40% 0.04div ~ 4.0div	Save and create template
Save & Create	F 4	F4
Previous Menu	F 5	Go to previous menu
		F5


Utility key (7/9)

Utility		Go to Probe Compensation menu
UTILITY		F1
ProbeComp Menu	F 1 → To Probe menu	Go to Time Set menu
Time Set Menu	F 2 → To Time set menu	F2
		Go to other menu
		F5 ←
More	F 5 ← →	

Utility key (8/9)

Probe compensation		Select probe compensation signal
Utility		F1 ←
ProbeComp Wave Type	F 1 → [] / [] / []	Set frequency for square wave
Frequency 1 K	F 2 → ([] only) 1k ~ 100k	F2 VAR ○
Duty Cycle 50%	F 3 → ([] only) 5% ~ 95%	Set duty cycle for square wave
Default 1k	F 4	F3 VAR ○
Previous Menu	F 5	Default compensation signal frequency
		F4
		Go to previous menu
		F5

Utility key (9/9)

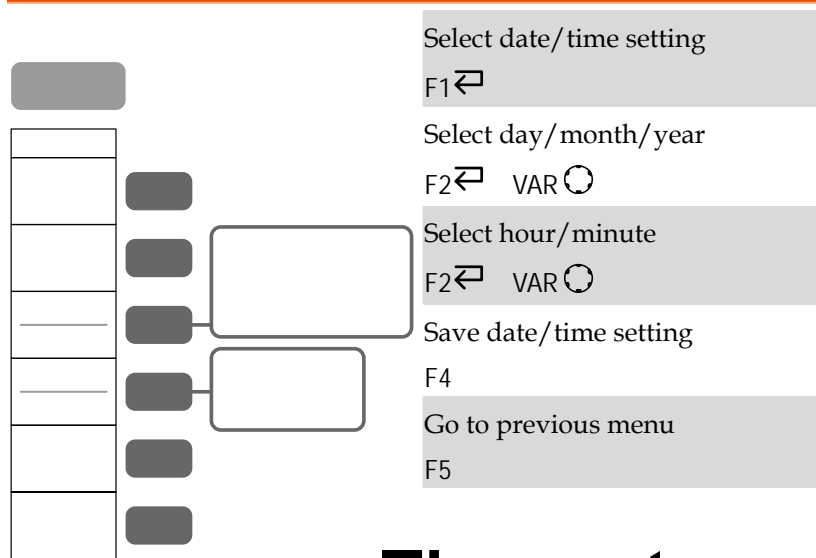

Time set

Utility


TIME SET

Date

Time

Default Settings

Here is the factory installed panel setting which appears when pressing the Save/Recall key→F1 (Default Setup).

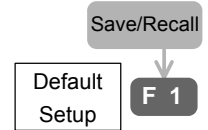

Acquisition	Mode: Normal	Memory length: 500
Channel	Scale: 2V/Div	CH1: On, CH2/3/4: Off
	Coupling: DC	Invert: Off
	BW limit: Off	Probe attenuation: x1
Cursor	Source: CH1	Horizontal: None
	Vertical: None	
Display	Accumulate: Off	Graticule:
Go-NoGo	Go-No: Off	Source: CH1
	Violating: Stop	
Horizontal	Scale: 2.5us/Div	Mode: Main
Math	Type: + (Add)	Channel: CH1+CH2
	Position: 0.00 Div	Unit/Div: 2V
	Math Off	
Measure	Source1, 2: CH1, CH2	Type: VPP, Avg, Freq, Duty Cycle, Risetime
Program	Mode: Edit	Step: 1
Trigger	Type: Edge	Source: Channel1
	Mode: Auto	Slope:
	Coupling: DC	Rejection: Off
	Noise Rejection: Off	
Utility	Square wave probe, 1k, 50% duty cycle	Hardcopy: save image, ink saver on
	Sound: Off	GPIB, Address 8


(Day) Day: 1 ~ 31
Year: 2000 ~ 2037

Built-in Help

The Help key shows help contents. When a functional key is pressed, simple explanations of its major functionalities appear on the display.







Applicable keys

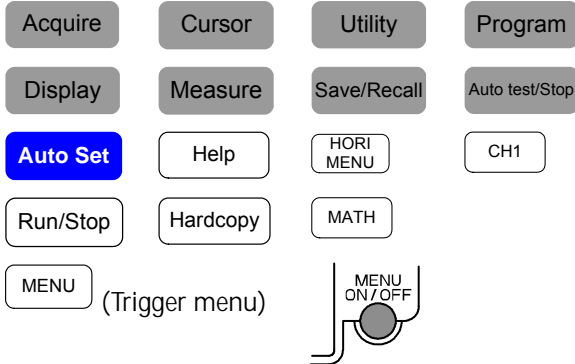

Panel operation

1. Press the Help key. The display changes to Help mode.
2. Press each key to access its help contents. (example: Acquire key)
3. Use the Variable knob to scroll the Help contents up and down.
4. Press the Help key again to exit the Help mode.

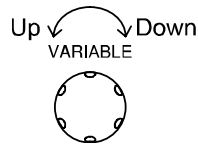

M EASUREMENT

Basic measurement	Channel activation.....	47
	Auto Set	48
	Run/Stop	49
	Horizontal position/scale	50
	Vertical position/scale	51
	Probe compensation signal.....	52
Automatic measurement	Measurement items.....	54
	Individual mode	56
	Display All mode	58
Cursor measurement	Use horizontal cursor	59
	Use vertical cursor.....	61
Math operation	Addition/Subtraction/Multiplication	64
	FFT.....	66
Go-NoGo test	Edit: Buzzer sound	69
	Edit: NoGo when	69
	Edit: Source signal.....	70
	Edit: Continue or stop after NoGo	70
	Edit: Template (boundary)	71
	Run Go-NoGo test	75
Program	Edit program	78
	Run program	80


Basic Measurement

This section describes the basic operations required in capturing and viewing the input signal. For more detailed operations, see the following chapters.


- Measurements → from page46
- Configurations → from page82

Channel activation

Activate channel To activate an input channel, press the Channel key. The LED turns On and the input signal waveform appears on the display.



De-activate channel To disable the channel, press the Channel key again. If the display menu is different from the Channel menu, press twice (the first press shows the Channel menu).



Default setup When the default setup is recalled (Save/Recall key F1), Channel 1 automatically turns On. Channel 2, 3, and 4 becomes Off.

Auto Set The Auto Set (page48) does NOT automatically activate the channels to which input signals are connected.


Auto Set

Background Auto Set function automatically configures the panel settings to position the input signal to the best viewing condition. GDS-2000 automatically configures the following parameters.


- Horizontal scale
- Vertical scale
- Trigger source channel

Panel operation 1. Connect the input signal to GDS-2000 and press the **Auto Set** key.

2. The waveform appears in the center of the display.

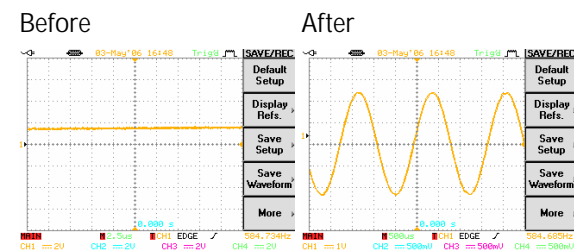

3. To undo Auto Set, press F5 (Undo). This feature is available for 5 seconds after Auto Set is activated.



Limitation Auto Set does not work in the following situation.

- Input signal frequency is less than 20Hz
- Input signal amplitude is less than 30mV


Run/Stop

Background By default, the waveform on the display is constantly updated (Run mode). Freezing the waveform by stopping signal acquisition (Stop mode) allows flexible observation and analysis. To enter the Stop mode, two methods are available: pressing the Run/Stop key or using the Single Trigger mode.

Stop mode icon When in Stop mode, the Stop icon appears at the top of the display.





Freeze waveform by Run/Stop key 1. Press the Run/Stop key once. The waveform and signal acquisition freezes. To unfreeze, press the Run/Stop key again.



Freeze waveform by Single Trigger mode 2. In the Single Trigger mode, the waveform always stays in the Stop mode, and is updated only when the Run/Stop key is pressed. For details, see page105. Note: pressing the Run/Stop key only updates the waveform once - it does not switch to Run mode (continuous update).

(Trigger)




Waveform operation The waveform can be moved or scaled in both Run and Stop mode, but in different manners. For details, see page94 (Horizontal position/scale) and page101 (Vertical position/scale).

Horizontal position/scale


For more detailed configuration, see page94.

Set horizontal position

The horizontal position knob moves the waveform left/right. As the waveform moves, the memory bar appears on the top of the display, indicating the portion of displayed waveform in the memory.

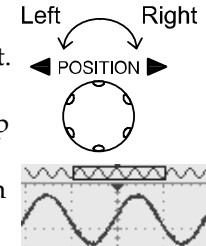


Stop mode In the Stop mode, the memory bar moves along with the waveform until it reaches the end of the memory.




Select horizontal scale

To select the timebase (scale), turn the TIME/DIV knob; left (slow) or right (fast).

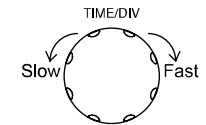


Range 1ns/Div ~ 10s/Div, 1-2-5 increment

The corresponding sampling rate appears on the upper side of the display. The timebase indicator appears on the lower side.

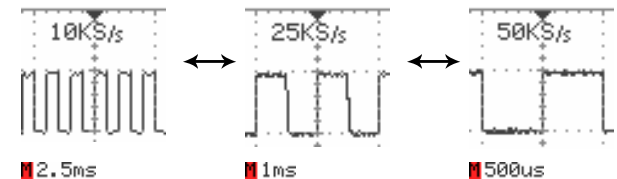

Stop mode In the Stop mode, the memory bar and waveform size changes according to the scale.




Vertical position/scale


For more detailed configuration, see page101.

Set vertical position

To move the waveform up or down, turn the vertical position knob for each channel.

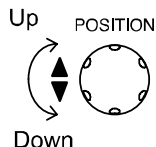

As the waveform moves, the vertical position of the cursor appears at the bottom left corner of the display.




Run/Stop mode

The waveform can be moved vertically in both Run and Stop mode.


Select vertical scale

To change the vertical scale, turn the VOLTS/DIV knob; left (down) or right (up).

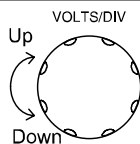

Range 2mV/Div ~ 5V/Div, 1-2-5 increment

The vertical scale indicator for each channel on the bottom left of the display changes accordingly.




Stop mode

In Stop mode, the vertical scale setting can be changed but the shape of the waveform does not change until the next acquisition.

Probe compensation signal

Background

This section introduces how to use the probe compensation signal for general usage, in case the DUT signal is not available. For probe compensation details, see page158.



Note that the frequency accuracy and duty factor are not guaranteed. Therefore the signal should not be used for reference purpose.

Waveform type



Square waveform for probe compensation. 1k ~ 100kHz, 5% ~ 95%.




Demonstration signal to show the effect of peak detection. See page84 for peak detection mode details.



Demonstration signal to show the effect of long memory. See page86 for memory length details.

View compensation waveform


1. Connect the probe between the compensation signal output and Channel input.

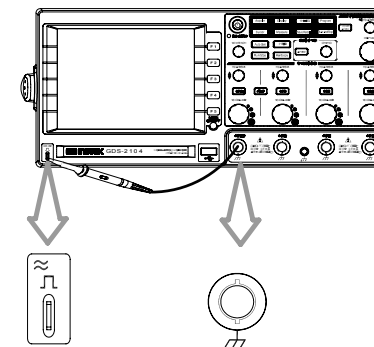

2. Press the Utility key.




3. Press F5 (More) twice.

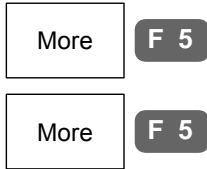

4. Press F1 (Wave type) repeatedly to select the wave type.




5. (For square wave only) To change the frequency, press F2 (Frequency) and use the Variable knob.

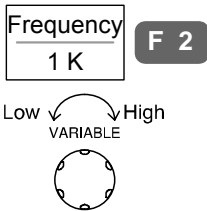

Range 1kHz ~ 100kHz

6. (For square wave only) To change the duty cycle, press F3 (Duty Cycle) and use the Variable knob.

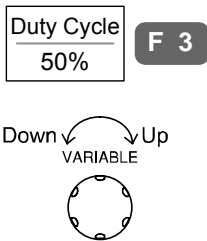

Range 5% ~ 95%

Probe compensation

For probe compensation details, see page158.







Automatic Measurement








Automatic measurement function measures and updates major items for Voltage, Time, and Delay type.



Measurement items







Overview	Voltage type	Time type	Delay type
	Vpp	Frequency	FRR
	Vmax	Period	FRF
	Vmin	RiseTime	FFR
	Vamp	FallTime	FFF
	Vhi	+Width	LRR
	Vlo	-Width	LRF
	Vavg	Dutycycle	LFR
	Vrms		LFF
	ROVShoot		
	FOVShoot		
	RPREShoot		
	FPREShoot		

Voltage measurement	Vpp		Difference between positive and negative peak voltage (=Vmax - Vmin)
	Vmax		Positive peak voltage
	Vmin		Negative peak voltage
	Vamp		Difference between global high and global low voltage (=Vhi - Vlo)
	Vhi		Global high voltage
	Vlo		Global low voltage

Vavg		Averaged voltage of the first cycle
Vrms		RMS (root mean square) voltage
ROVShoot		Rise overshoot voltage
FOVShoot		Fall overshoot voltage
RPREShoot		Rise preshoot voltage
FPREShoot		Fall preshoot voltage

Time measurement	Freq		Frequency of the waveform
	Period		Waveform cycle time (=1/Freq)
	Risetime		Rising time of the pulse (~90%)
	Falltime		Falling time of the pulse (~10%)
	+Width		Positive pulse width
	-Width		Negative pulse width
	Duty Cycle		Ratio of signal pulse compared with whole cycle =100x (Pulse Width/Cycle)

Delay measurement	FRR		Time between: Source 1 first rising edge and Source 2 first rising edge
	FRF		Time between: Source 1 first rising edge and Source 2 first falling edge


FFR		Time between: Source 1 first falling edge and Source 2 first rising edge
FFF		Time between: Source 1 first falling edge and Source 2 first falling edge
LRR		Time between: Source 1 first rising edge and Source 2 last rising edge
LRF		Time between: Source 1 first rising edge and Source 2 last falling edge
LFR		Time between: Source 1 first falling edge and Source 2 last rising edge
LFF		Time between: Source 1 first falling edge and Source 2 last falling edge

Individual mode


Individual mode shows five selected measurement items, two channels each, on the menu bar.

View measurement result

1. Press the Measure key.



2. The measurement results for two selected channels appear on the menu bar, constantly updated. Press F1 ~ F5 to change the measurement item.

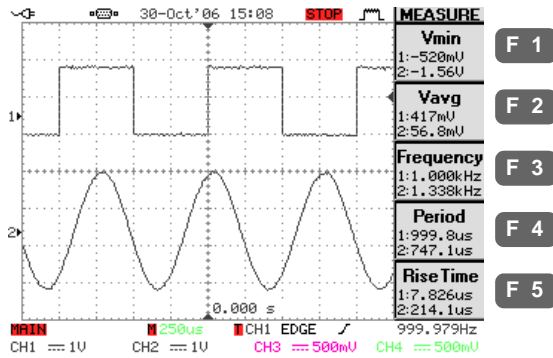

Select measurement item

3. The selection menu appears. Press F1 (Source 1) repeatedly to select the first source channel.

Source 1
CH 1

F 1

4. Press F2 (Source 2) repeatedly to select the second source channel.

Source 2
CH 2



F 2

5. Press F3 repeatedly to select the measurement type: Voltage, Time, and Delay.

Voltage
Vpp

F 3

6. Use the Variable knob or press F4 repeatedly to select the measurement item.

VARIABLE



F 4

7. Press F5 (Previous Menu) to confirm the item selection and to go back to the measurement results view.

Previous Menu

F 5

Display All mode

Display All mode shows and updates all items from Voltage and Time type measurement.

View measurement result

1. Press the Measure key twice.


Measure

Measure

2. Press the channel for which the measurement results need to be observed.

CH1

F 1

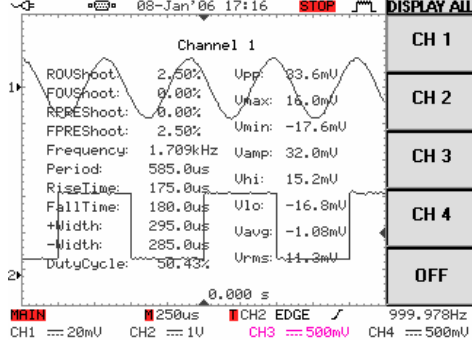3. The results of Voltage and Time type measurement appear on the display.
 

4. Press F5 (OFF) to clear the measurement results from the display.

OFF

F 5

Delay type

Delay type measurement is not available in this mode. Use the Individual measurement mode (page56) instead.


Cursor Measurement

Cursor line, horizontal or vertical, shows the position and value of the waveform and math operation result.


Use horizontal cursor

Panel operation/
Range

1. Press the Cursor key.



2. Press F1 (Source) repeatedly to select the source channel.



Range

4CH model CH1, 2, 3, 4, Math

2CH model CH1, 2, Math

3. Press F2 (Horizontal) repeatedly to activate the horizontal cursor.



Range

- ⋮ ⋮ Horizontal cursor not activated
- | ⋮ Left cursor movable, right cursor position fixed
- ⋮ | Right cursor movable, left cursor position fixed
- | | Left and right cursor movable together


4. The cursor position information appears on F4 menu.




Parameter

- T1 Time position of the left cursor
- T2 Time position of the right cursor
- Δ The time distance between the left and right cursor
- f The time distance (Δ) converted to frequency

5. Use the Variable knob to move the cursor left or right. The F4 content changes accordingly.



Example

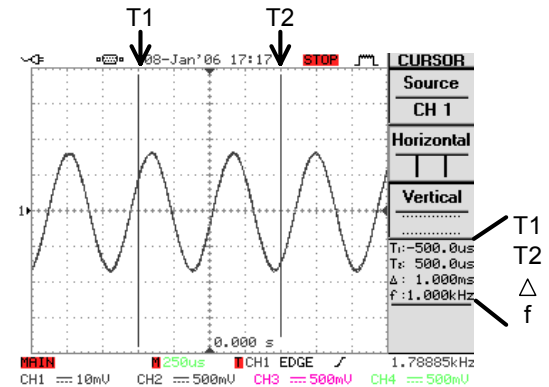

FFT Math

The FFT Math has different F4 content. For FFT math details, see page66.




- f1 Frequency position of the left cursor
- f2 Frequency position of the right cursor
- Δ The frequency distance between the left and right cursor
- Div The frequency distance per horizontal division


Use vertical cursor

Panel operation/
Range

1. Press the Cursor key.



2. Press F1 (Source) repeatedly to select the source channel.



Range

4CH model CH1, 2, 3, 4, Math

2CH model CH1, 2, Math

3. Press F2 (Vertical) repeatedly to activate the vertical cursor.



Range

- Vertical cursor not activated
- Upper cursor movable, lower cursor position fixed
- Lower cursor movable, upper cursor position fixed
- ===== Upper and lower cursor movable together


4. The cursor position information appears on F5 menu.




Parameter

- V1 Voltage level of the upper cursor
- V2 Voltage level of the lower cursor
- Δ The voltage difference between the upper and lower cursor

5. Use the Variable knob to move the cursor up or down. The F5 content changes accordingly.



Example

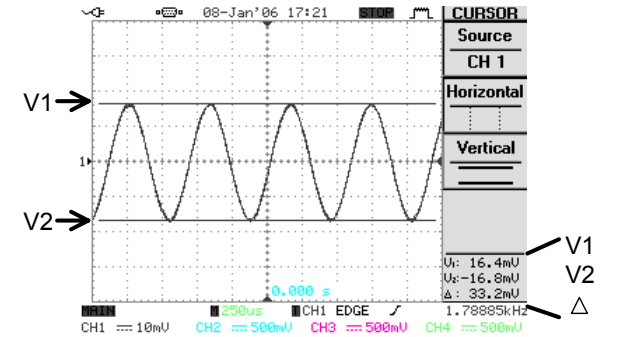

Note: FFT Math

The FFT Math has different F5 content. For FFT math details, see page66.



- M1 Magnitude of the left cursor
- M2 Magnitude of the right cursor
- Δ The frequency distance between the left and right cursor

Math Operation

Overview

Background	Math operation runs addition, subtraction, multiplication, or FFT using the input signals and shows the result on the display. The resulted waveform characteristics can be measured using the cursors.	
Addition (+)	Adds amplitude of two signals. Channel pairs 4CH model: Channel 1 + 2, 3 + 4 2CH model: Channel1 + 2	
Subtraction (-)	Extracts the amplitude difference between two signals. Channel pairs 4CH model: Channel 1 - 2, 3 - 4 2CH model: Channel1 - 2	
Multiplication (*)	Multiplies amplitude of two signals. Channel pairs 4CH model: Channel 1 * 2, 3 * 4 2CH model: Channel1 * 2	
FFT	Runs FFT calculation on a signal. Four types of FFT windows are available: Hanning, Flattop, Rectangular, and Blackman. Channel 4CH model: Channel 1, 2, 3, 4 2CH model: Channel 1, 2	
Hanning FFT window	Frequency resolution	Good
	Amplitude resolution	Not good
	Suitable for...	Frequency measurement on periodic waveform


Flattop FFT window	Frequency resolution	Not good
	Amplitude resolution	Good
	Suitable for...	Amplitude measurement on periodic waveform
Rectangular FFT window	Frequency resolution	Very good
	Amplitude resolution	Bad
	Suitable for...	Single-shot phenomenon (this mode is the same as having no window at all)
Blackman FFT window	Frequency resolution	Bad
	Amplitude resolution	Very good
	Suitable for...	Amplitude measurement on periodic waveform

Addition/Subtraction/Multiplication


Panel operation

1. Activate the channel pairs.
4CH model: CH1&2, 3&4
2CH model: CH1&2
2. Press the Math key.
3. Press F1 (Operation) repeatedly to select addition (+), subtraction (-), or multiplication (x).


- (For 4CH model only) press F2 repeatedly to select the channel pairs, 1&2 or 3&4.



- The math measurement result appears on the display. The vertical scale (fixed) of math waveform appears in F5 (Unit/div).

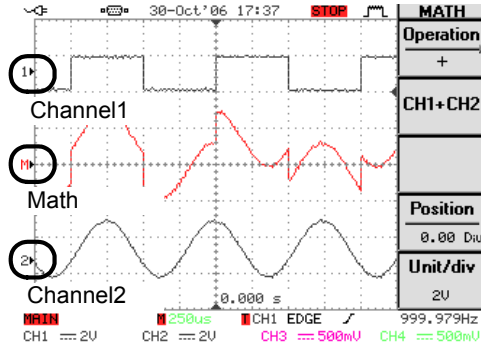

- To move the math waveform vertically, press F4 (Position) and use the Variable knob.

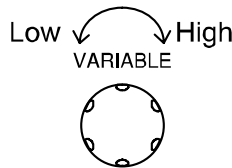


- To clear the math result from the display, press the Math key again.



FFT


- Panel operation 1. Press the Math key.



- Press F1 (Operation) repeatedly to select FFT.




- Press F2 repeatedly to select the source channel.




- Press F3 repeatedly to select the FFT window type.



- The FFT result appears. For FFT, the horizontal scale changes from time to frequency, and the vertical scale from voltage to dB.

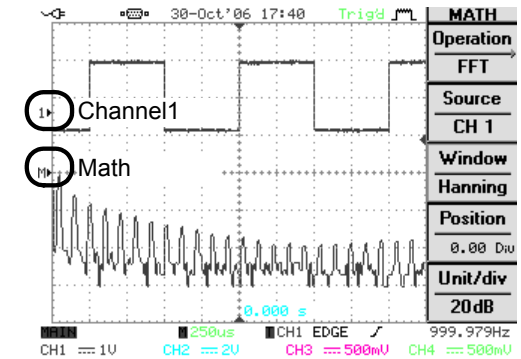

- 6. To move the FFT waveform vertically, press F4 (Position) and use the Variable knob.

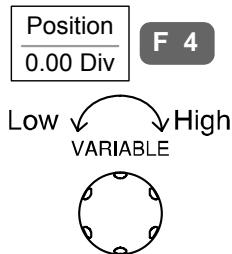


Range -12.00 Div ~ +12.00 Div

- 7. To select the vertical scale of FFT waveform, press F5 (Unit/Div) repeatedly. RMS Voltage can also be selected instead of dB.



Range 1, 2, 5, 10, 20 dB/Div
RMS Voltage

- 8. To clear the FFT result from the display, press the Math key again.




Go-NoGo Test

Overview







Background Go-NoGo test checks if a waveform fits inside the user-specified maximum and minimum amplitude boundary (template). The test result comes out in three ways: menu contents, buzzer sound, and pulse signal output from the rear panel terminal.

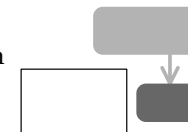Test parameters	item	default setting	setup details
	Buzzer sound when the test fails (NoGo)	Off	page69
	NoGo criteria: in or out of the boundary	Out	page69
	Test signal	Channel 1	page70
	Test continue or stop when NoGo occurs	Stop	page70
	Boundary (template) - select minimum and maximum as separate waveforms or create both boundaries from a single waveform	Min/Max separately	page71

Default setting To recall the default setting, press the Save/Recall key, then press F1 (Default Setup). See page44 for details.








Edit: Buzzer sound





- Panel operation
1. Press the Utility key. 
 2. Press F3 repeatedly to select the buzzer for test fail (NoGo) notification. 
-  High pitch
 Middle pitch
 Low pitch
 Sound Off

Note The buzzer setting also affects the vertical resolution calibration (page157) – the buzzer notifies the completion of calibration.





Edit: NoGo when



1. Press the Utility key. 
 2. Press F5 (More). 
 3. Press F4 (NoGo When) repeatedly to select the NoGo condition. 
-  NoGo when waveform is outside of the boundary
 NoGo when waveform is inside the boundary


Edit: Source signal

1. Press the Utility key. 
2. Press F5 (More). 
3. Press F3 (Go-NoGo Menu). 
4. Press F2 (Source) repeatedly to select the channel to be tested. (Note: the selected channel is automatically activated) 

Edit: Continue or stop after NoGo

1. Press the Utility key. 
2. Press F5 (More). 
3. Press F3 (Go-NoGo Menu). 
4. Press F3 (Violating) repeatedly to select whether to continue or stop test after the NoGo condition is met. 

Stop	The test stops when the NoGo condition is met. The buzzer does not sound.
Stop+ 	The test stops and the buzzer sounds when the NoGo condition is met.
Continue	The test continues even when the NoGo condition is met. The buzzer does not sound.
Continue+ 	The test continues even when the NoGo condition is met. The buzzer also sounds.

Note If the sound is turned Off in the buzzer setting (page69), the sound is not produced even when selecting Stop/Continue+ .

Edit: Template (boundary)

Background The NoGo template sets the upper and lower amplitude boundary. Two methods are available: Min/Max and Auto.

Min/Max Selects the upper boundary (Max) and lower boundary (Min) as separate waveforms, from the internal memory.

Advantage: The template shape and the distance (allowance) between the source signal are fully customizable.








Disadvantage: The waveforms (templates) have to be stored internally prior to this selection.

Auto Creates the upper and lower boundary together from an input signal, not from internally stored waveform.

Advantage: No need to store the waveforms prior to this selection.

Disadvantage: The template shape is proportional to the source signal. The distance (allowance) between the source signal and upper/lower template are always symmetrical.


Min/Max setting 1. Make sure the source signal, on which the templates are based, appears on the display.

2. Press the Utility key. 
3. Press F5 (More). 
4. Press F3 (Go-NoGo Menu). 
5. Press F1 (Template Edit). 
6. Press F1 (Template) repeatedly to select the upper (Max) or lower (Min) boundary template. 
7. Press F2 (Source). Use the Variable knob to select the template from internally stored waveform. For waveform store procedure, see page129.  

Max (marked as waveform "A" in the display) Maximum boundary: RefA, W1 ~ 20 internal memory

Min (marked as waveform "B" in the display) Minimum boundary: RefB, W1 ~ 20 internal memory


- Press F3 (Position). Use the Variable knob to move the waveform amplitude level.

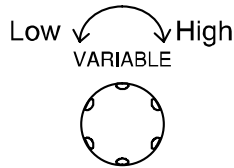

- Repeat step 9, 10, 11 for the other template setting, Min or Max.



- When the templates are set, press F4 (Save & Create) to save them.

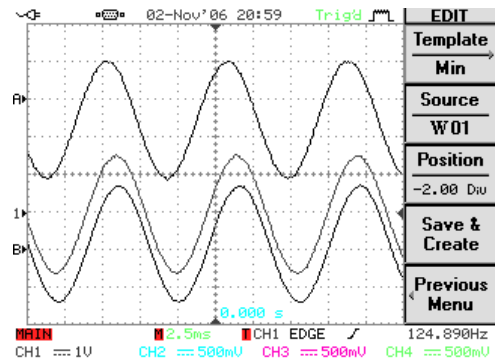

Auto setting

- Make sure the source signal, on which the templates are based, appears on the display.

- Press the Utility key.



- Press F5 (More).



- Press F3 (Go-NoGo Menu).




- Press F1 (Template Edit).




- Press F1 repeatedly to Auto position.




- Press F2 repeatedly to select the signal channel on which the template is created.




- The template appears on the screen as waveform A (maximum) and waveform B (minimum). Use the Variable knob to set the tolerance range. The template in the display changes accordingly.

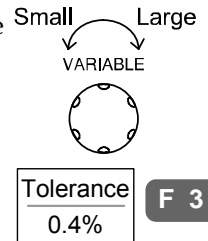

- If necessary, press F3 (tolerance) repeatedly to select the tolerance unit: percentage (%) or division (div).



10. When the templates are set, press F4 (Save & Create) to save it.

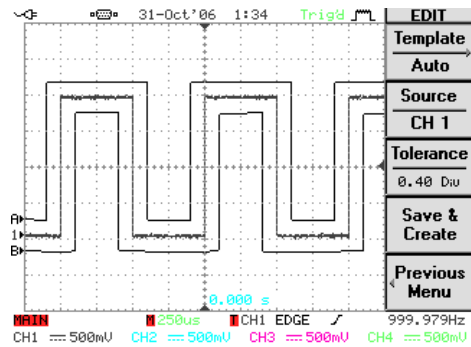

Run Go-NoGo test

This section assumes all Go-NoGo settings (page68) are completed.

Panel operation

1. Press the Utility key.




2. Press F5 (More).




3. Press F3 (Go-NoGo Menu).




4. Make sure the source signal and the templates (boundary) both appear on the display.

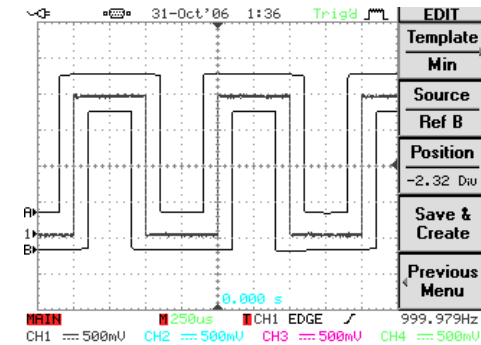

5. Press F4 (Go-NoGo). The Go-NoGo test starts running and stops according to the continue/stop condition (page70). To stop the test manually, Press F4 again.




6. The test results appear in F5 menu. The denominator (lower side) shows the number of completed test. The numerator (upper side) shows the number of failed test (NoGo).



7. The Go/NoGo terminal (open collector) on the rear panel sends out a 5Vpp, 10us pulse signal to external device every time the NoGo condition is met.

GO / NO GO (Open collector)



Program

Overview

Background Program function measures input signals using cursors or automatic measurement functions, in user-defined sequence, duration, loop count, and panel settings. This feature is useful for automated and repetitive measurement, such as in assembly line or quality inspection test.

Parameter	Program set	1 set
	Program step	Maximum 20 steps
Measurement item	Cursor or Automatic measurement	
Time (duration) per step	1 ~ 99 seconds, or user activation	
Program loop	1 ~ 99 loops, the first and last step	settable

- Programming step**
1. Show the target waveform on the display and decide the type of measurement that needs to be done: Horizontal/Vertical Cursor or Automatic measurement.
 2. Setup the other panel configurations: trigger, acquisition, horizontal/vertical scale, etc. Save the settings to the internal memory. See page128 for details.
 3. Edit the program (page78) using the internally stored panel setup.
 4. Run the program (page80).


Edit program

This section assumes that the panel setting is already defined and saved (step 1 and 2 in the previous page).


- Panel operation**
1. Press the Program key. The display changes into program edit mode.




2. Press F1 (Edit/Play) to select the Edit side.

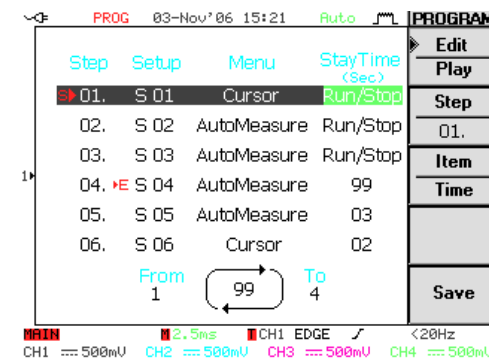

3. Press F2 (Step). Use the Variable knob to select the step that needs to be edited. The cursor on the display moves accordingly.



4. Press F3 (Item) repeatedly to select the three parameters for a step: panel setup, menu (Cursor or Automatic measurement), and time.



- Setup Selects the panel setup stored in the internal memory. S01 ~ S20. For panel setup store/recall details, see page128 (save) or page138 (recall).
- Menu Selects the measured item: Cursor or Automatic measurement.
- Time Sets the duration of the step, 1 ~ 99 seconds or user control (Run/Stop). When Run/Stop is selected, the program freezes at that step until the user presses the Run/Stop key.



5. Continue the above for all program steps. When completed, press F5 (Save) to confirm and save the program.




Run program

This section assumes that the program editing (see previous page) is completed.


- Panel operation
1. Press the Program key. The display changes into program mode.
 2. Press F1 (Edit/Play) repeatedly to select the Play side.

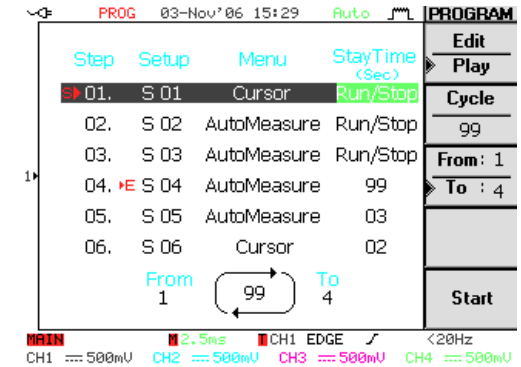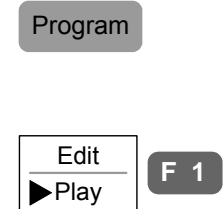

3. Press F2 (Cycle). Use the Variable knob to select the number of program loop: 1 ~ 99.

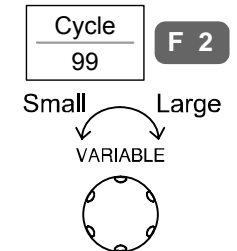


- Press F3 (From/To) to select the From: side. Use the Variable knob to select the program start step: 1 ~ 20. The "S" mark appears in the selected step.

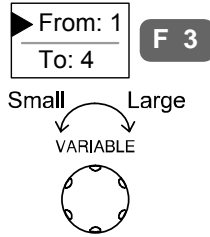

01. S 01 Cursor Run/Stop

- Press F3 (From/To) to select the To: side. Use the Variable knob to select the program end step: 1 ~ 20. Note that the To: step must be larger or equal to the From: step. The "E" mark appears in the selected step.

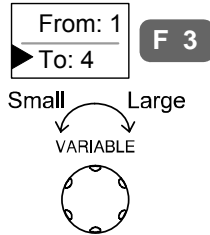


04. E S 04 AutoMeasure 99


- Press F5 (Start). The display changes into program running mode and starts executing the first step.



- The message "Press Run/Stop key to continue" on the bottom of the display shows the user has to activate the next step manually. Press the Run/Stop key to move to the next step.



- To stop the program manually, press the Auto test/Stop key. When all steps are completed, the program stops running.

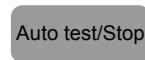

CONFIGURATION

Acquisition	Select acquisition mode.....	84
	Select waveform memory length	86
	Real time vs Equivalent time sampling mode ..	89
Display	Select waveform drawing (vector/dot)	90
	Accumulate waveform.....	91
	Set display contrast	92
	Freeze the waveform.....	92
	Select display grid	93
	Turn Off menu	93
Horizontal	Move waveform position horizontally	94
	Select horizontal scale.....	95
	Select waveform update mode	96
	Zoom waveform horizontally	98
	Show waveform in X-Y mode.....	99
Vertical (Channel)	Move waveform position vertically.....	101
	Select vertical scale	101
	Select coupling mode	102
	Invert waveform vertically.....	103
	Limit bandwidth	103
	Select probe attenuation level.....	104


Trigger	Trigger type overview	105
	Trigger parameter overview	106
	Use edge trigger	109
	Use advanced delay trigger (2CH model)	110
	Use video trigger	112
	Use pulse width trigger	113
<hr/>		
System	View system information	115
	Select menu language	115
	Set date and time	116

Acquisition

Acquisition process samples the analog input signals and converts them into digital format for internal processing.

Select acquisition mode


Panel operation 1. Press the Acquire key.



2. Select the acquisition mode from F1 (Normal) ~ F3 (Average). The acquisition icon on the top right corner of the display changes accordingly.


Normal	F 1
Peak Detect	F 2
Average 2	F 3

Range	Normal		All of the acquired data is used to draw the waveform.
	Peak Detect		Only the minimum and maximum value pairs for each acquisition interval (bucket) are used. This mode is useful for catching abnormal glitches in the signal.
	Average		Multiple acquired data are averaged. This mode is useful for drawing a noise-free waveform. To select the average number, press F3 repeatedly. Average number: 2, 4, 8, 16, 32, 64, 128, 256

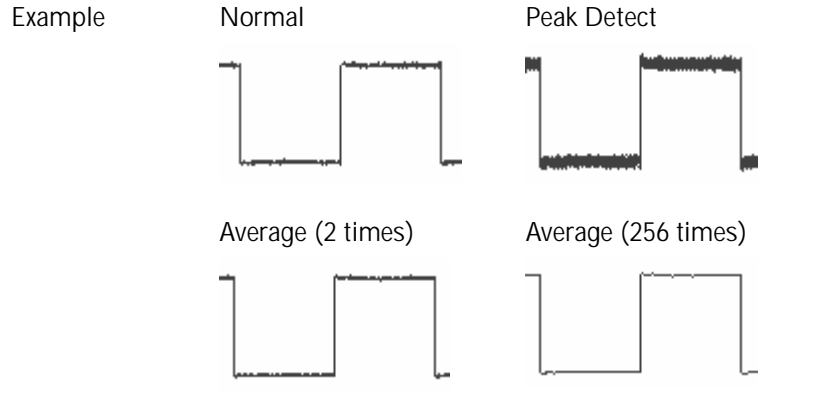

Peak detect effect using probe comp. waveform


1. One of the probe compensation waveforms can demonstrate peak detection mode. Connect the probe to the probe compensation output.



2. Press the Utility key.



3. Press F5 (More) twice.

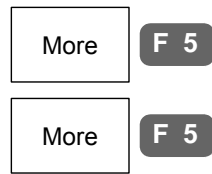


4. Press F1 (Wave Type) and select the square wave.





5. Press the Auto Set key. GDS-2000 positions the waveform in the center of the display.



6. Press the Acquire key.



7. Press F2 (Peak Detect) or F1 (Normal) and see that in the Peak detection mode, spike noise is captured.

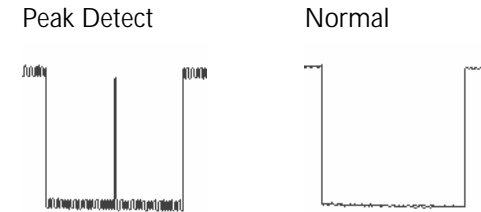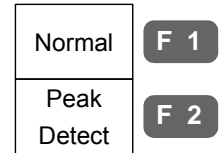

Select waveform memory length


Background

Memory length defines the amount of waveform data (points) included in each trigger event. Two modes are available: short and long.


Short mode Each waveform includes fewer points and is updated rapidly. It is useful for observing the shape of fast-changing waveform such as Frequency Modulation.

Long mode Each waveform includes more points and is updated relatively slowly. It is useful for observing the details of single-shot phenomenon such as spike noise.



Panel operation 1. Press the Acquire key.



- Press F5 (Mem Leng) to select the memory length (points), short or long.




Range (memory point)	500	Short memory length; useful for catching high frequency signal.
	5000	Long memory length when three or four channels are active.
	12500	Long memory length when two channels are active.
	25000	Long memory length when only one channel is active.

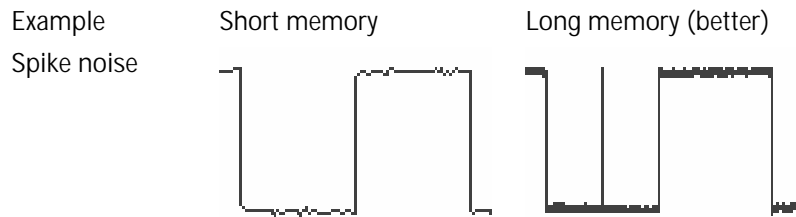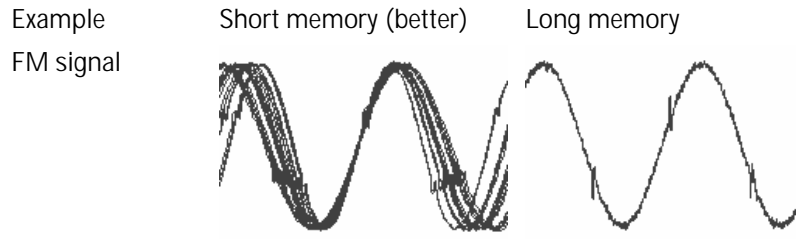

Note The display always shows 250 points (300 when the menu is turned Off) regardless of the memory length. In short memory length, all 500 points can be observed. In long memory length, either the memory points are condensed into 500 points (Real-time sampling mode) or all points can be observed (Equivalent-time sampling mode). For sampling mode details, see page89.

Long memory effect using probe comp. waveform


- One of the probe compensation waveform can demonstrate long memory mode. Connect the probe to the output.



- Press the Utility key.




- Press F5 (More) twice.




- Press F1 (Wave Type) and select the waveform.





- Press the Auto Set key. GDS-2000 positions the waveform in the center of the display. Set the horizontal scale to 2.5ms to observe the whole waveform shape.

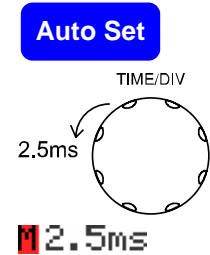

- Press the Acquire key.



- Press F5 (Mem Leng) repeatedly to switch between short and long memory length.

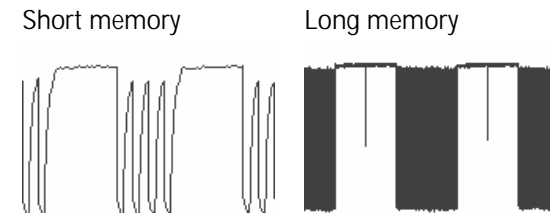


Real time vs Equivalent time sampling mode

Background	GDS-2000 automatically switches between two sampling modes, Real-time and Equivalent-time, according to the number of active channel and sampling rate.	
Parameter	Real-time sampling	One sampled data is used to reconstruct a single waveform. Short-time events might get lost if the sampling rate gets too high. This mode is used when the sampling rate is relatively low.
	Equivalent-time sampling	Multiple numbers of sampled data are accumulated to reconstruct a single waveform. Restores greater waveform details but takes longer to update the waveform. This mode is used when the sampling rate becomes higher.

Real-time / Equivalent-time sampling threshold



Input channel: Activated
 Not activated
 — Does not matter

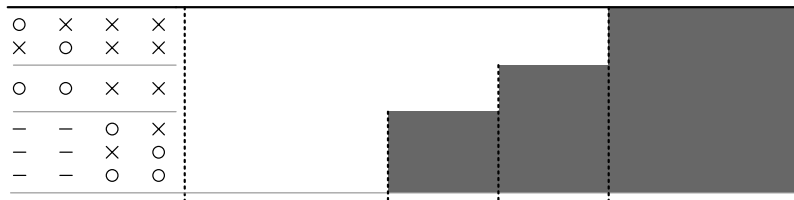

Display


Display menu defines how the waveforms and parameters appear on the main LCD display.

Select waveform drawing (vector/dot)


- Panel operation
1. Press the Display key. 
 2. Press F1 (Type) repeatedly to select the waveform drawing. 

Range	Dots	Only the sampled dots are displayed.
	Vectors	Both the sampled dots and the connecting line are displayed.

Example: Dots (square wave)

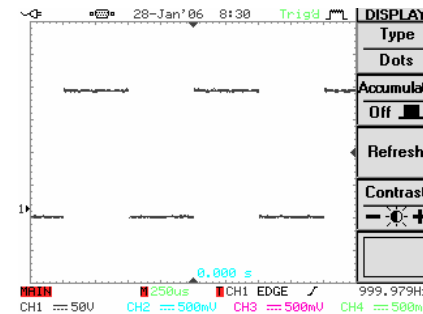




Example: Vectors (square wave)

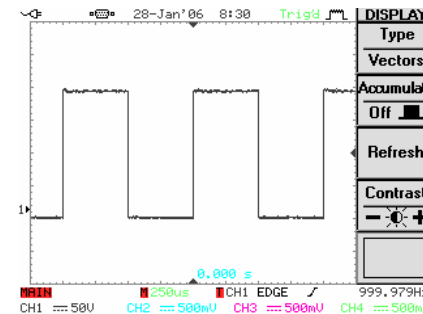


Accumulate waveform







Background Accumulation preserves the old waveform drawings and overwrites new waveforms on top of it. It is useful for observing waveform variation.

- Panel operation**
1. Press the Display key. 
 2. Press F2 (Accumulate) to turn On waveform accumulation. 
 3. To clear the accumulation and start over (refresh), press F3 (Refresh). 

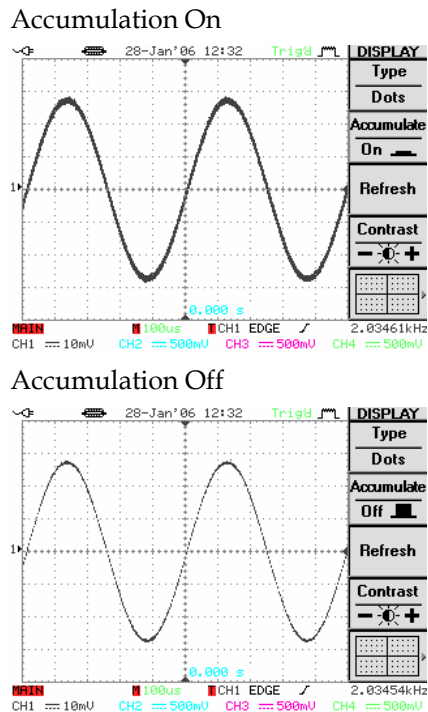Example





Set display contrast

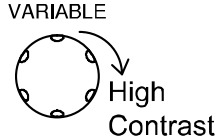- Panel operation**
1. Press the Display key. 
 2. Press F4 (Contrast). 
 - 3a. Turn the Variable knob left to lower the contrast (dark display).  
 - 3b. Turn the Variable knob right to raise the contrast (bright display).  

Freeze the waveform (Run/Stop)


For more details about Run/Stop mode, see page49.

- Panel operation**
1. Press the Run/Stop key. To unfreeze the waveform, press the Run/Stop key again. 
 2. The waveform and the trigger freezes. The trigger indicator on the top right of the display shows Stop. 

Select display grid

Panel operation

1. Press the Display key.



2. Press F5 (Grid type) repeatedly to select the grid.



Range



Shows the full grid; X and Y axis for each division.



Shows only the center X and Y frame.




Shows only the outer frame.


Turn Off menu

Panel operation

1. Press the MENU ON/OFF key below F1 ~ F5.

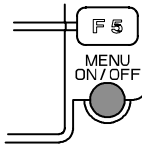

2. The menu disappears. The waveform points changes from 250 to 300.

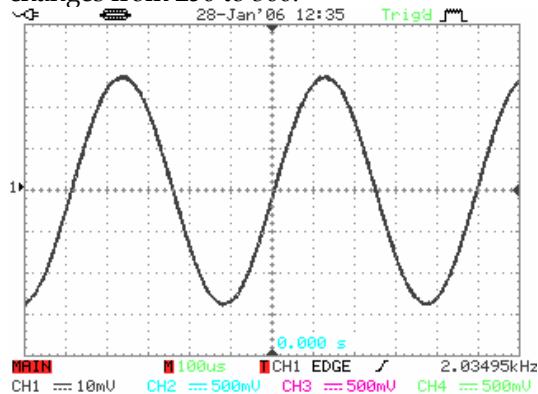


Horizontal View

This section describes how to set the horizontal scale, position, and waveform display mode.

Move waveform position horizontally


Panel operation

The horizontal position knob moves the waveform left/right. As the waveform moves, the memory bar appears on the top of the display indicating the portion of displayed waveform in the memory.

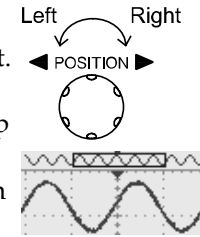


Run mode

In Run mode, the memory bar keeps its relative position in the memory since the entire memory is continuously captured and updated.

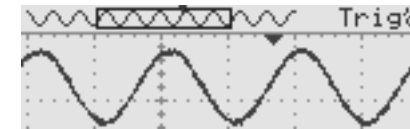


Stop mode

In Stop mode, the memory bar moves along with the waveform until it reaches the end of the memory.

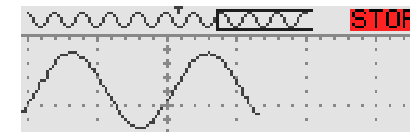


Select horizontal scale

Select horizontal scale To select the timebase (scale), turn the TIME/DIV knob; left (slow) or right (fast).

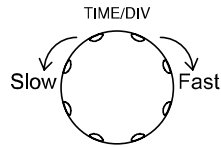


Range 1ns/Div ~ 10s/Div, 1-2-5 increment


The corresponding sampling rate appears on the upper side of the display. The timebase indicator appears on the lower side.

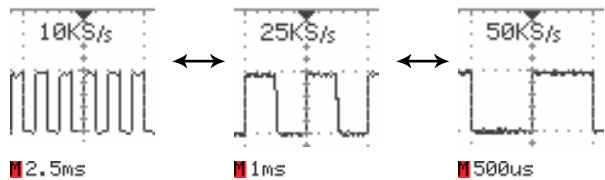

Run mode In Run mode, the memory bar and waveform size keep their proportion. When the timebase becomes slower, it automatically switches to Scan mode (see the next page).




Stop mode In Stop mode, the memory bar and waveform size changes according to the scale.



Select waveform update mode

Background The display update mode is switched automatically or manually according to timebase and trigger. The indicator on the bottom left of the display shows the current mode.



Main mode **MAIN** Updates the whole displayed waveform at once. Automatically selected when the timebase (sampling rate) is fast.


Timebase $\leq 50\text{ms}/\text{div}$ ($\geq 500\text{Sa}/\text{s}$)

Trigger all modes

Scan mode **SCAN** Updates the waveform gradually from the left side of the display to the right. The waveform position is fixed. Automatically selected when the timebase (sampling rate) is slow.

Timebase $\geq 100\text{ms}/\text{div}$ ($\leq 250\text{Sa}/\text{s}$)

Trigger Auto mode only

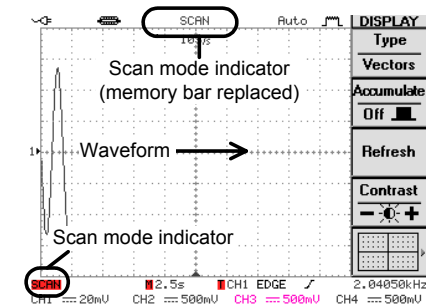


- Note
- When the update mode switches from Main to Scan, GDS-2000 automatically selects the Auto trigger mode. See page105 for trigger details.
 - To view the signal peak clearly in Scan mode, turn on the Peak detection (page84).

Roll mode

ROLL Updates and moves the waveform gradually from the right side of the display to the left. Manually selected when the timebase (sampling rate) is slow.

Timebase $\geq 250\text{ms}/\text{div}$ ($\leq 100\text{Sa}/\text{s}$)

Trigger all modes

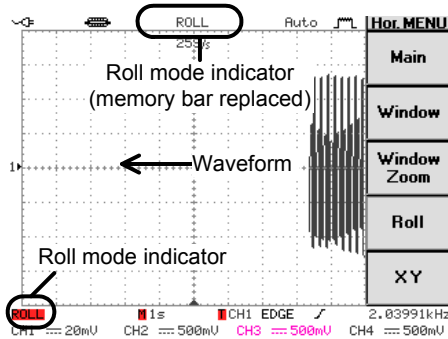


Select Roll mode manually

1. Press the Horizontal menu key.



2. Press F4 (Roll). The waveform starts scrolling from the right side of the display. The update mode indicator shows Roll mode.



Note

The Roll mode locks the timebase to be at least $250\text{ms}/\text{div}$ ($100\text{Sa}/\text{s}$). If faster timebase or sampling rate is required, get out of the Roll mode by pressing F1 (Main).



Zoom waveform horizontally

Panel operation/ range


1. Press the Horizontal Menu key.




2. Press F2 (Window) key.



3. The WINDOW indicator, which shows the zoom range, appears on the bottom left corner of the display. Use the horizontal position knob to move the zoom range sideways, and TIME/DIV knob to change the zoom range width.


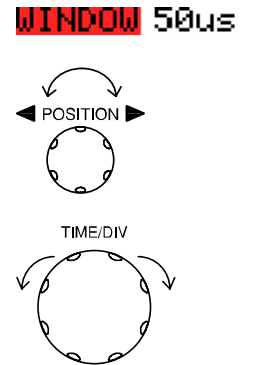


The width of the bar in the middle of the display is the actual zoomed area.

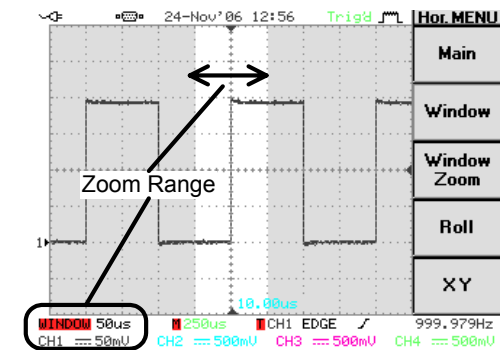

Zoom range 1ns ~ 1ms

- Press F3 (Window Zoom). The specified range gets zoomed. The ZOOM indicator appears on the bottom left side of the display.

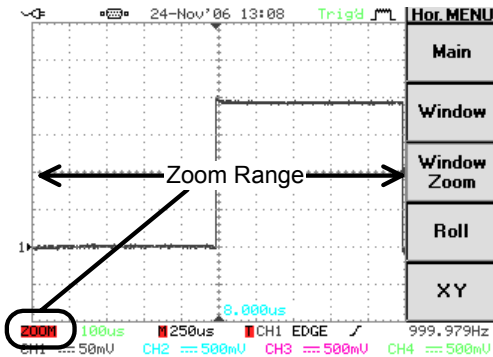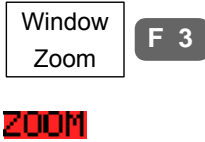


- To go back to the original view, press F1 (Main).




Show waveform in X-Y mode

Background The X-Y mode compares the voltage of Channel 1 and Channel 2 waveforms in a single display. This mode is useful for observing the phase relationship between the two.

- Panel operation**
- Connect the signals to Channel 1 (X-axis) and Channel 2 (Y-axis).




- Make sure both Channel 1 and 2 are activated (LED On). Press the Channel key if necessary.

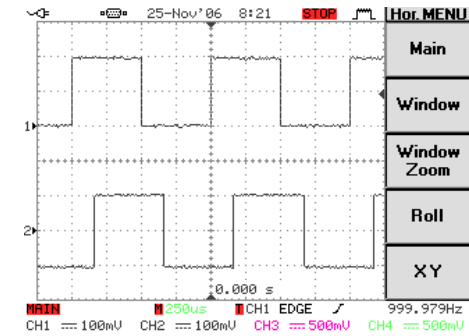


- Press the Horizontal menu key.



- Press F5 (XY). The display shows two waveforms in X-Y format; Channel 1 as X-axis, Channel 2 as Y-axis.

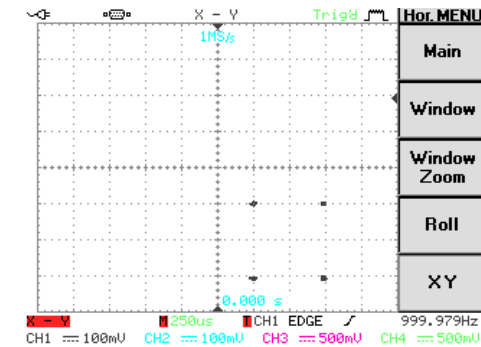

- Horizontal Position knob and Time/Div knob are disabled under the X-Y mode. To move the waveform position, use the vertical position knob: Channel 1 knob moves the waveform horizontally, Channel 2 knob vertically.

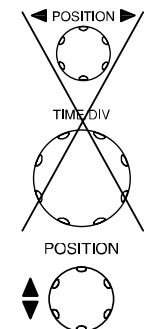


Vertical View (Channel)


This section describes how to set the vertical scale, position, and coupling mode.

Move waveform position vertically

Panel operation To move the waveform up or down, turn the vertical position knob for each channel.

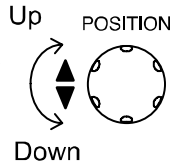


As the waveform moves, the vertical position of the cursor appears at the bottom left corner of the display.




Run/Stop mode The waveform can be moved vertically in both Run and Stop mode.

Select vertical scale

Panel operation To change the vertical scale, turn the VOLTS/DIV knob; left (down) or right (up).

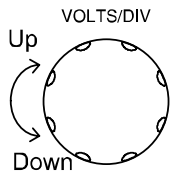

The vertical scale indicator on the bottom left of the display changes accordingly.



Range 2mV/Div ~ 5V/Div, 1-2-5 increments


Stop mode In Stop mode, the vertical scale setting can be changed but the waveform shape stays the same.

Select coupling mode

Panel operation 1. Press the Channel key.



2. Press F1 (Coupling) repeatedly to select the coupling mode.



Range



DC coupling mode. The whole portion (AC and DC) of the signal appears on the display.




Ground coupling mode. The display shows only the zero voltage level as a horizontal line. This mode is useful for measuring the signal voltage with respect to the ground level.



AC coupling mode. Only the AC portion of the signal appears on the display. This mode is useful for observing AC waveforms mixed with DC signal.

Example

Observing the AC portion of the waveform using AC coupling

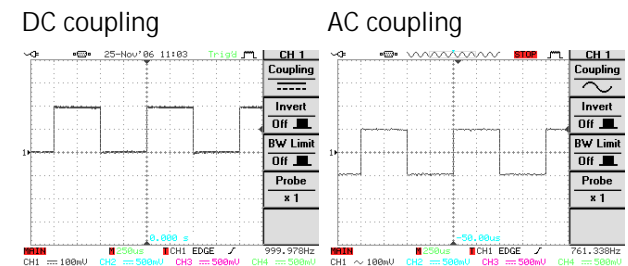

Invert waveform vertically


Panel operation 1. Press the Channel key.



2. Press F2 (Invert) to invert the waveform.



Example

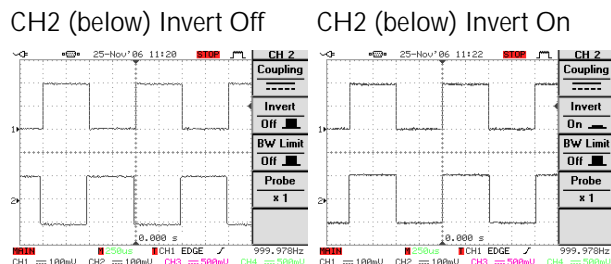

Limit bandwidth


Background Bandwidth limitation puts the input signal into a 20MHz (-3dB) low-pass filter. This function is useful for cutting off high frequency noise to see the clear waveform shape.


Panel operation 1. Press the Channel key.



2. Press F3 (BW Limit) to turn Off the limitation.




3. The BW icon  appears in the channel indicator at the bottom of the display.

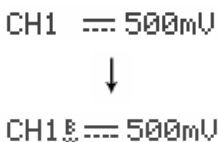


Example

BW Limit Off

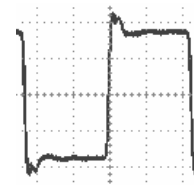

BW Limit On

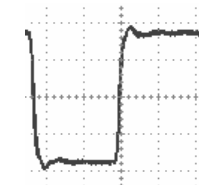

Select probe attenuation level


Background

A signal probe has an attenuation switch to lower the original DUT signal level to the oscilloscope input range, if necessary. The probe attenuation selection adjusts the vertical scale so that the voltage level on the display reflects the real value on DUT.


Panel operation 1. Press the Channel key.



2. Press F4 (Probe) repeatedly to select the attenuation level.



3. The voltage scale in the channel indicator changes accordingly. There is no change in the waveform shape.

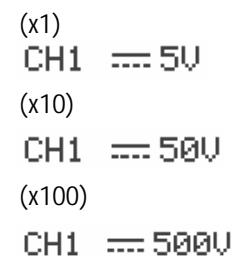

Range x1, x10, x100

Note

The attenuation factor adds no influence on the real signal. It just changes the voltage scale on the display.

Trigger


Trigger configures the condition GDS-2000 captures the incoming signal.

Trigger type overview


Edge (+Delay) Triggers when the signal crosses an amplitude threshold in either positive or negative slope.
 (for 2CH models only) The advanced Delay trigger works in tandem with the edge trigger, by waiting for a specified time or number of event before the edge trigger starts. This method allows pinpointing a location in a long series of trigger events.

Note: when using the delay trigger, trigger source is limited to Channel 1 or 2.

Delay trigger example (by event)

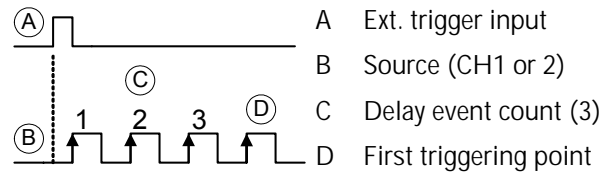



Delay trigger example (by time)




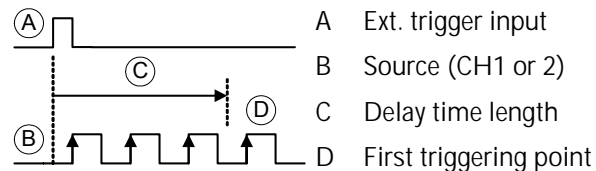




Video Extracts a sync pulse from a video format signal, and triggers on a specific line or field.

Pulse Triggers when the pulse width of the signal is too narrow or too wide compared to the setting.

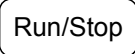




Trigger parameter overview

Trigger source	CH1 ~ 4	Channel 1 ~ 4 input signals
	Line	AC mains signal
	Ext	(For 2CH models only) external trigger input signal
		
Trigger mode	Auto	GDS-2000 generates an internal trigger if there is no trigger event, to make sure waveforms are constantly updated regardless of trigger events. Select this mode especially when viewing rolling waveform at slower timebase.
	Normal	GDS-2000 acquires waveform only when a trigger event occurs.
	Single	GDS-2000 acquires waveform once when a trigger event occurs, then stop acquiring. Press the Run/Stop key to acquire waveform again.
		
Auto level		When turning this function ON, GDS-2000 automatically adjusts the trigger level to the center amplitude of the waveform.
Holdoff		The holdoff function defines the waiting period before GDS-2000 starts triggering again after a trigger point. The Holdoff function ensures a stable display.

Video standard (video trigger)	NTSC	National Television System Committee	
	PAL	Phase Alternative by Line	
	SECAM	SEquential Couleur A Memoire	
Sync polarity (video trigger)		Positive polarity	
		Negative polarity	
Video line (video trigger)		Selects the trigger point in the video signal.	
	field	1 or 2	
	line	1~263 for NTSC, 1~313 for PAL/SECAM	
Pulse condition (pulse trigger)		Sets the pulse width (20ns ~ 200us) and the triggering condition.	
	>	Longer than	= Equal to
	<	Shorter than	≠ Not equal to
Trigger time (delay trigger)		Sets the delay time (100ns ~ 1.3ms) between the trigger event and the real trigger timing.	
Trigger event (delay trigger)		Sets the number of events (2 ~ 65000) passed after the trigger event, until the real trigger timing.	
Ext. input level (delay trigger)		Sets the amplitude threshold level for the external trigger input signal.	
	TTL	1.48V	
	ECL	1.35V	
	User	-12V ~ +12V, user-set level	
Trigger slope		Triggers on the rising edge.	
		Triggers on the falling edge.	
Trigger coupling		Triggers only on the AC component.	

		Triggers on AC+DC component.
Frequency rejection	LF	Puts a high-pass filter and rejects the frequency below 50kHz.
	HF	Puts a low-pass filter and rejects the frequency above 50kHz.
Noise rejection		Rejects noise signal.

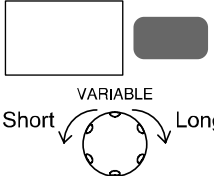







Setup Holdoff and Auto level




Background	Holdoff function defines the waiting period before GDS-2000 starts triggering again after a trigger point. Auto level function automatically adjusts the trigger level to the center amplitude of the waveform.	
Panel operation	1.	Press the Trigger menu key   twice.
	2.	To set the Holdoff time, press F1 (Holdoff) and use the Variable knob. The resolution depends on the horizontal scale.  Range 40ns~2.5s Pressing F2 (Set to Minimum) sets the Holdoff time to the minimum, 40ns. 
	3.	To turn Auto Level On/Off,  press F5 (Auto Level).








Note: The holdoff function is automatically disabled when the waveform update mode is in Roll or Scan mode (page96).

Use edge trigger


- Panel operation
- Press the Trigger menu key. 
 - Press F1 repeatedly to select edge trigger. The edge trigger indicator appears at the bottom of the display. 

 From left: channel, edge trigger, slope
 - Press F2 repeatedly to select the trigger source. 
 Range Channel 1 ~ 4, Line, Ext
 - Press F3 repeatedly to select the trigger mode. 
 Range Auto, Normal, Single
 - Press F5 (Slope/coupling) to set trigger slope and coupling. 
 - Press F1 (Slope) repeatedly to select the trigger slope, which also appears at the bottom of the display. 
 Range Rising edge, falling edge
 - Press F2 (Coupling) repeatedly to select the trigger coupling. 
 Range DC, AC

- Press F3 (Rejection) to select the frequency rejection mode. 
 Range LF, HF, Off
- Press F4 (Noise Rej) to turn the noise rejection On/Off. 
 Range On, Off
- Press F5 (Previous menu) to go back to the previous menu. 

Use advanced delay trigger (2CH model)


- Panel operation
- Make sure the edge trigger source is set to CH1 or CH2. If not, GDS-2000 automatically selects CH1 as the source.
 - Press F1 repeatedly to select Delay trigger. 

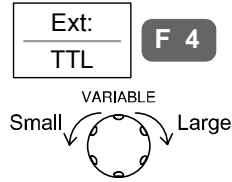 From left: channel, delay trigger, slope
 - Press F2 (By time) or F3 (By event) and use the Variable knob to select the delay time or event after the first trigger condition. 


 Range 100ns ~ 1.3ms (by time)
 2 ~ 65000 (by event)

- Press F4 (Ext) repeatedly to select the threshold level for the external trigger input.



Range TTL (1.48V), ECL (1.35V),
User (-12V ~ +12V)

- Press F5 (Slope/Coupling) to set the slope and coupling condition for external trigger input signal. Note that this setting does not affect the trigger source signal (Channel 1 or 2).



Use video trigger

Panel operation

- Press the Trigger menu key.




- Press F1 repeatedly to select video trigger. The video trigger indicator appears at the bottom of the display.



CH1 VIDEO P

From left: channel, video trigger, polarity

- Press F2 repeatedly to select the trigger source channel.



Range Channel 1 ~ 4

- Press F3 repeatedly to select the video standard.





Range NTSC, PAL, SECAM

- Press F4 repeatedly to select the video signal polarity.



Range positive, negative

- Press F5 repeatedly to select the video field line. Use the Variable knob to select the video line.






Field 1, 2


Video line NTSC: 1 ~ 262 (Even), 1 ~ 263 (Odd)
PAL/SECAM: 1 ~ 312 (Even),
1 ~ 313 (Odd)


Use pulse width trigger


Panel operation

1. Press the Trigger menu key. 
2. Press F1 repeatedly to select pulse width trigger. The pulse width trigger indicator appears at the bottom of the display. 


CH1 PULSE 

From left: channel, pulse width trigger, slope
3. Press F2 repeatedly to select the trigger source. 


Range Channel 1 ~ 4, Line, Ext
4. Press F3 repeatedly to select the trigger mode. 


Range Auto, Normal, Single
5. Press F4 repeatedly to select the pulse condition. Then use the Variable knob to set the pulse width. 


VARIABLE


Small  Large


Condition >, <, =, ≠


Width 20ns ~ 200us
6. Press F5 to set trigger slope and coupling. 

7. Press F1 (Slope) repeatedly to select the trigger slope, which also appears at the bottom of the display. 

Range Rising edge, falling edge
8. Press F2 (Coupling) repeatedly to select the trigger coupling. 

Range DC, AC
9. Press F3 (Rejection) to select the frequency rejection mode. 





Range LF, HF, Off
10. Press F4 (Noise Rej) to turn the noise rejection On/Off. 

Range On, Off
11. Press F5 (Previous menu) to go back to the previous menu. 

System Info / Language / Clock

This section describes how to set the interface, beeper, language, time/date, and probe compensation signal.



View system information

- Panel operation
1. Press the Utility key. 
 2. Press F5 (More). 
 3. Press F2 (System Info). The upper half of the display shows the system information in the following format.
 - Manufacturer name • Model name
 - Serial number • Firmware version
 4. Press any other key (for example F5 (More) to go back to the waveform display mode. 





Select menu language

- Parameter The following is the list of menu language available by default. Language selection differs according to the region to which GDS-2000 is shipped.
- English • Chinese (traditional)
 - Chine (simplified) • Korean

- Spanish
- Russian
- Dutch
- Italian
- Portuguese
- Japanese
- German
- Polish
- French

- Panel operation
1. Press the Utility key. 
 2. Press F4 (Language) repeatedly to select the language. 


Set date and time

- Panel operation/parameter
1. Press the Utility key. 
 2. Press F5 (More) twice. 

 3. Press F2 (Time Set Menu). 
 4. Press F2 (Year/ Month/ Date) repeatedly. Use the Variable knob to change the value.


Day	1
-----	---

 - Year 2000 ~ 2037
 - Month 1 ~ 12
 - Day 1 ~ 31


5. Press F4 (Save) to confirm the value.




6. Press F1 (Date) to switch to the Time setting menu.



7. Press F2 (Hour/ Minute) repeatedly. Use the Variable knob to change the value.







Hour 0 ~ 23

Minute 0 ~ 59


8. Press F4 (Save) to confirm the value.



9. Turn Off the display and turn it On again (power cycle).

 x 2

10. Make sure the date/time setting is correctly reflected at the top of the display.



SAVE/RECALL

File format / Utility	Display image file format..... 119
	Waveform file format 119
	Setup file format..... 121
	USB flash drive file utility 122
<hr/>	
Save	File type/source/destination..... 127
	Save panel setting 128
	Save waveform..... 129
	Save All 133
<hr/>	
Recall	File type/source/destination..... 136
	Recall default panel setting..... 136
	Recall waveform 138
	Recall waveform 139
	Recall waveform 141

File Format/Utility

Display image file format

Format	DSxxxx.bmp or Axxxx.bmp (Windows bitmap format)
Contents	The current display image in 234 x 320 pixels, color format. The background color can be inverted (Ink saver function).


Waveform file format

Format	DSxxxx.csv or Axxxx.csv (Comma-separated values format, can be opened in spreadsheet applications such as Microsoft Excel)	
Waveform type	CH1 ~ 4	Input channel signal
	Math	Math operation result (page63)
Storage location	W1 ~ W20	Waveform file stored in the internal memory. Stored waveforms can be copied to USB flash drive for transfer, or to Ref. A ~ D for showing on the display (W1 ~ W20 waveforms cannot be directly recalled on the display).
	Ref A ~ D	Reference waveform stored in the internal memory, separate from W1 ~ W20. From Ref A ~ D, waveforms can be recalled directly on the display with amplitude and frequency information. Useful for reference purpose in measurements.

Contents:
waveform data

The waveform data can be used for detailed analysis. It consists of horizontal and vertical position of the waveform for the entire memory length.

One division includes 25 points of horizontal and vertical data. The vertical point starts from the center line. The horizontal point starts from the leftmost waveform.

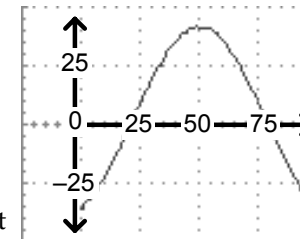

The time length or voltage level which each data point represents differs according to the vertical and horizontal scale. For example:

Vertical scale: 10mV/div (4mV per point)

Horizontal scale: 100us/div (4us per point)

Contents: other
data

The following information is also included in the waveform file.

- Memory length
- source channel
- vertical offset
- vertical scale
- coupling mode
- waveform last dot address
- date and time
- trigger level
- vertical position
- time base
- probe attenuation
- horizontal view
- horizontal scale
- sampling period
- sampling mode

Setup file format


Format	DSxxxx.set or Axxxx.set (proprietary format) The setup file saves or recalls the following setting.	
Contents	Acquire	<ul style="list-style-type: none"> mode memory length
	Cursor	<ul style="list-style-type: none"> source channel cursor on/off cursor location
	Display	<ul style="list-style-type: none"> dots/vectors grid type accumulation on/off
	Measure	<ul style="list-style-type: none"> item source channel
	Utility	<ul style="list-style-type: none"> hardcopy type interface type buzzer type Go-NoGo cond. ink saver on/off RS-232 config GPIB address menu language
	Program	<ul style="list-style-type: none"> step contents start/stop steps loop count
	Horizontal	<ul style="list-style-type: none"> display mode position scale
	Trigger	<ul style="list-style-type: none"> trigger type trigger mode video polarity pulse timing source channel video standard video line slope/coupling
	Channel (vertical)	<ul style="list-style-type: none"> vertical scale coupling mode bandwidth limit on/off vertical position invert on/off probe attenuation
	Math	<ul style="list-style-type: none"> operation type vertical position FFT window source channel unit/div

USB flash drive file utility


Background For USB flash drive, file deletion, folder creation, file/folder rename are available from the front panel. This feature is not available for internally stored files.

- Panel operation
- Connect the drive to the front or rear panel USB port. Note: Only one host connection, front or rear, is allowed at a time.

Front



Rear


 - Press the Save/Recall key. Select any save or recall functionality, for example USB destination in Save image function.

Save/Recall

(Example)

Save Image


F 1

Destination USB


F 3

File Utilities

F 5
 - Press F5 (File Utilities). The display shows the USB flash drive contents, root directory.

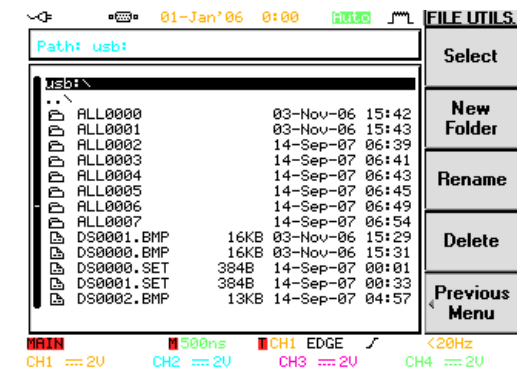

- Use the Variable knob to move the cursor. Press F1 (Select) to go into the folder or go back to the previous directory level.

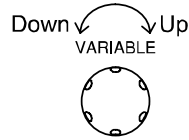

Select **F 1**

Go back to the root directory

Go back to the previous (higher) directory


ALL Go into the folder

Create new folder / Rename file or folder


- Move the cursor to the file or folder location and press F2 (New Folder) or F3 (Rename). The file/folder name and the character map appear on the display.

New Folder **F 2**

Rename **F 3**

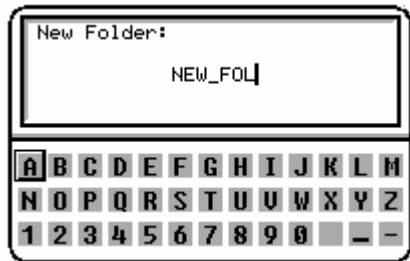

- Use the Variable knob to move the pointer to the characters. Press F1 (Enter Character) to add a character or F2 (Back Space) to delete a character.

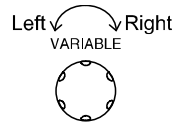

Enter Character **F 1**

Back Space **F 2**

- When editing is completed, press F4 (Save). A new folder or a new folder/file name is created.

Save **F 4**

- Press F5 (Previous Menu) to go back to the previous menu.

Previous Menu **F 5**

Delete folder/file

- Move the cursor to the folder or file location and press F4 (Delete). A message appears at the bottom of the display, asking additional confirmation.

Delete **F 4**

Press F4 again to confirm this process.


- If the file/folder still needs to be deleted, press F4 (Delete) again to complete deletion. To cancel deletion, press any other key.

Delete **F 4**

- The USB flash drive content is updated. Press F5 (Previous Menu) to go back to Save/Recall menu.


Previous Menu **F 5**

Quick Save (HardCopy)

Background The Hardcopy key works as a shortcut for saving or printing out information. 

Once set, subsequent file saving only requires pressing the Hardcopy key. Hardcopy key can be configured into three operations: save image, save all (image, waveform, setup), and printing.


The printing operation is described in page145.

Using the Save/Recall key can also save files but with more configurations. For details, see page127. 




Functionality	Save image (*.bmp)	Saves the current display image into a USB flash drive connected to the front or rear panel terminal.
	Save all	Saves the following items into a USB flash drive connected to the front or rear panel terminal. <ul style="list-style-type: none"> • Current display image (*.bmp) • Current system setup (*.set) • Current waveform data (*.csv) • Last stored system setup (*.set) • Last stored waveform data (*.csv)
	Print out	Prints out the display image to an external printer connected to USB port. For details, see page145.

- Panel operation**
1. Connect the drive to the front or rear panel USB port. Note: Only one host connection, front or rear, is allowed at a time.


Front





Rear



 2. Press the Utility key. 
 3. Press F1 (Hardcopy Menu). 
 4. Press F1 (Function) repeatedly to select Save image or Save all.


Function Save All



Function SaveImage


 5. To invert the color for the saved or printed display image, press F2 (Ink Saver) and turn On the Ink Saver. 

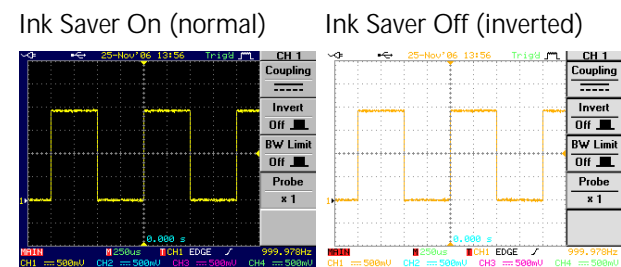

6. To save the image or folder, press the Hardcopy key.  The file or folder is saved to the root directory of the USB flash drive.

Save


File type/source/destination

Item	Source	Destination
Panel setup (DSxxxx.set)	<ul style="list-style-type: none"> • Front panel settings 	<ul style="list-style-type: none"> • Internal memory: S1 ~ S20 • External memory: USB
Waveform data (DSxxxx.csv)	<ul style="list-style-type: none"> • Channel 1 ~ 4 • Math operation result • Reference waveform A ~ D 	<ul style="list-style-type: none"> • Internal memory: Reference waveform A ~ D, W1 ~ W20 • External memory: USB
Display image (DSxxxx.bmp)	<ul style="list-style-type: none"> • Display image 	<ul style="list-style-type: none"> • External memory: USB
Save All	<ul style="list-style-type: none"> • Display image (Axxxx.bmp) • Waveform data (Axxxx.csv) • Front panel settings (Axxxx.set) 	<ul style="list-style-type: none"> • External memory: USB

Save panel setting

Panel operation


1. (For saving to an external USB flash drive) Connect the drive to the front or rear panel USB port.
Note: Only one host connection, front or rear, is allowed at a time.

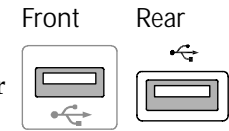



2. Press the Save/Recall key.



3. Press F3 (Save Setup). The display shows the available file destinations.

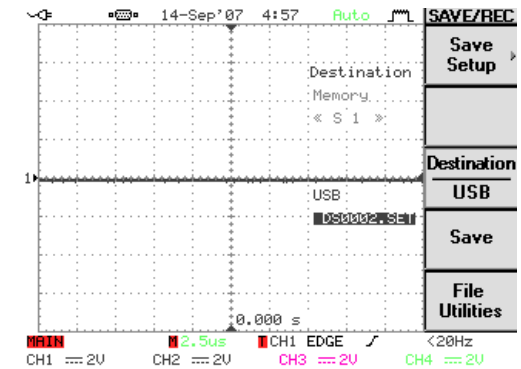

4. Press F3 (Destination) repeatedly to select the saved location. Use the Variable knob to change the memory location (S1 ~ S20) or the file name (DSxxxx.set).



Memory Internal memory, S1 ~ S20

USB External flash drive, no practical limitation on the amount of file. When saved, the setup file is placed in the root directory.

- Press F4 (Save) to confirm saving. When completed, a message appears at the bottom of the display.



Setup save to DS0005.SET completed


Note The file will not be saved if the power is turned Off or USB drive is taken out before the message.

USB file utility To edit USB flash drive contents (create/ delete/ rename files and folders), press F5. For details, see page122.



Save waveform


- (For saving to an external USB flash drive) Connect the drive to the front or rear panel USB port. Note: Only one host connection, front or rear, is allowed at a time.

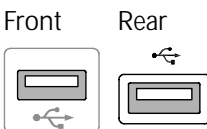



- Press the Save/Recall key.



- Press F4 (Save Waveform). The display shows the available source and destination options.


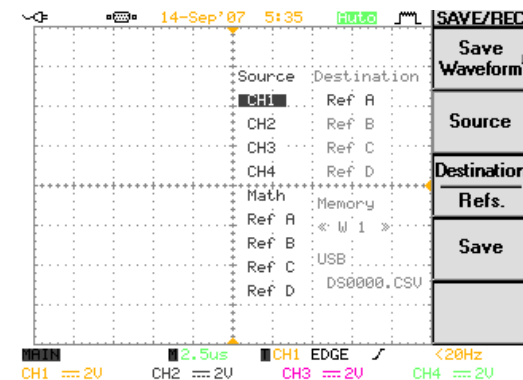


- Press F2 (Source). Use the Variable knob to select the source signal.



CH1 - CH2 Channel 1 ~ 2 signal (2CH model)
 CH1 - CH4 Channel 1 ~ 4 signal (4CH model)
 Math Math operation result (page63)
 RefA - D Internally stored reference waveforms A ~ D


- Press F3 (Destination) repeatedly to select the file destination. Use the Variable knob to select the memory location or file name.




Memory Internal memory, W1 ~ W20


USB External flash drive, no practical limitation on the amount of file. When saved, the waveform file is placed in the root directory.


Ref Internal reference waveform, A~D

- Press F4 (Save) to confirm saving. When completed, a message appears at the bottom of the display. 




Waveform save to RefA completed

Note  The file will not be saved if the power is turned Off or USB drive is taken out before the message.


USB file utility To edit USB flash drive contents (create/ delete/ rename files and folders), press F5. For details, see page122. 


PC software (FreeWave) Saving waveform is also available through the proprietary PC software, downloadable from GWInstek website. 


Save display image

- Connect the drive to the front or rear panel USB port. Note: Only one host connection, front or rear, is allowed at a time.  
- Press the Save/Recall key. 


- Press F5 (More). 


- Press F1 (Save Image). The display shows the available file destinations. 

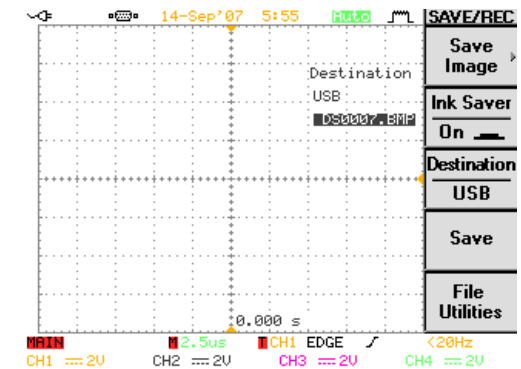


- Press F2 (Ink Saver) repeatedly to invert the background color (On) or not (Off). 

Ink Saver On (normal) Ink Saver Off (inverted)

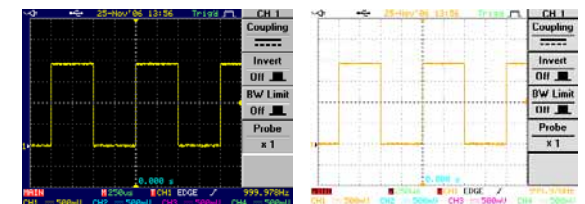


- Press F3 (Destination). Use the Variable knob to select the file name. 



USB External flash drive, no practical limitation on the amount of file. When saved, the image file is placed in the root directory.

7. Press F4 (Save) to confirm saving. When completed, a message appears at the bottom of the display.



Note  The file will not be saved if the power is turned Off or USB drive is taken out before the message.

USB file utility To edit USB flash drive contents (create/ delete/ rename files and folders), press F5. For details, see page122.




PC software (FreeWave) Saving display image is also available through proprietary PC software, downloadable from GWInstek website.



Save All

- Panel operation 1. Connect the drive to the front or rear panel USB port. Note: Only one host connection, front or rear, is allowed at a time.

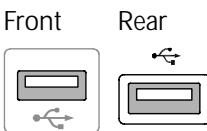


2. Press the Save/Recall key.



3. Press F5 (More).




4. Press F2 (Save All). The display shows the available file destinations. The following files are saved, contained in a folder.



Setup file (Axxx.set) Two types of setups are saved: the current panel setting and the last internally saved setting (one of S1 ~ S20).

Display image (Axxx.bmp) The current display image in bitmap format.


Waveform data (Axxx.csv) Two types of waveform data are saved: the currently active channel data and the last internally saved data (one of W1 ~ W20).

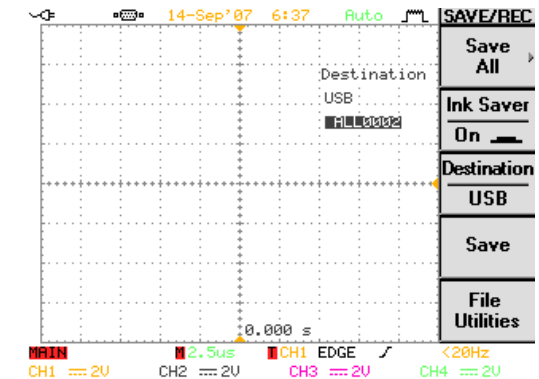


5. Press F2 (Ink Saver) repeatedly to invert the background color (On) or not (Off) for the display image.



Ink Saver On (normal) Ink Saver Off (inverted)

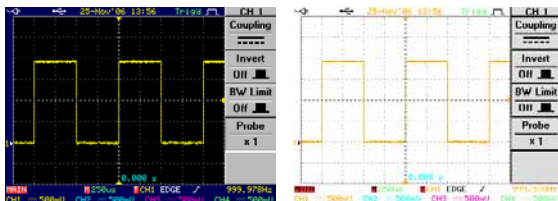


- Press F3 (Destination). Use the Variable knob to select the file name.



USB External flash drive, no practical limitation on the amount of file. When saved, the folder is placed in the root directory.

- Press F4 (Save) to confirm saving. When completed, a message appears at the bottom of the display.



Note  The file will not be saved if the power is turned Off or USB drive is taken out before the message.

- Together with the current setup/waveform/image, the last saved waveform file (one from W1 ~ W20) and setup file (one from S1 ~ S20) are also included in the folder.

USB file utility To edit USB flash drive contents (create/ delete/ rename files and folders), press F5. For details, see page122.





Recall




File type/source/destination

Item	Source	Destination
Default panel setup	<ul style="list-style-type: none"> Factory installed setting 	<ul style="list-style-type: none"> Current front panel setting
Reference waveform	<ul style="list-style-type: none"> Internal memory: A ~D 	<ul style="list-style-type: none"> Current front panel
Panel setup (DSxxxx.set)	<ul style="list-style-type: none"> Internal memory: S1 ~ S20 External memory: USB 	<ul style="list-style-type: none"> Current front panel
Waveform data (DSxxxx.csv)	<ul style="list-style-type: none"> Internal memory: W1 ~ W20 External memory: USB 	<ul style="list-style-type: none"> Reference waveform A ~ D
Display image (DSxxxx.bmp)	<ul style="list-style-type: none"> External memory: USB 	<ul style="list-style-type: none"> Display

Recall default panel setting

- Panel operation 1. Press the Save/Recall key. 
2. Press F1 (Default Setup). The factory installed setting is recalled and replaces the current panel setting. 


Setting contents The following is the default setting contents.


Acquisition	Mode: Normal	Memory length: 500
Channel	Scale: 2V/Div	CH1: On, CH2/3/4: Off
	Coupling: DC	Invert: Off
	BW limit: Off	Probe attenuation: x1
Cursor	Source: CH1	Horizontal: None
	Vertical: None	
Display	Type: Dots	Accumulate: Off
	Graticule: 	
Go-NoGo	Go-No: Off	Source: CH1
	NoGo when: 	Violating: Stop
Horizontal	Scale: 2.5us/Div	Mode: Main Timebase
Math	Type: + (Add)	Channel: CH1+CH2
	Position: 0.00 Div	Unit/Div: 2V
Measure	Source1, 2: CH1, CH2	Type: VPP, Freq, FRR
Program	Mode: Edit	Step: 1
	Trigger	Type: Edge
Mode: Auto		Slope: 
Coupling: DC		Rejection: Off
Utility	Noise Rejection: Off	
	SaveImage, InkSaver Off	GPIB, Address 8
	Sound: Off	


Recall reference waveform on the display


Panel operation 1. The reference waveform must be stored in advance. See page for waveform store details.


2. Press the Save/Recall key. 

3. Press F2 (Display Refs). The reference waveform display menu appears. 

4. Select the reference waveform from F1 (Ref A) to F4 (Ref D) and press it. The waveform appears on the display and the period and amplitude of the waveform appears in the menu. 

↓
 F 2

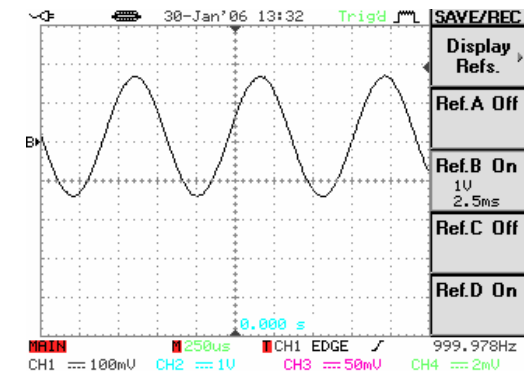


5. To clear the waveform from the display, press F1 ~ F4 key again. 

Recall panel setting

Panel operation

- (For recalling from an external USB flash drive) Connect the drive to the front or rear panel USB port. Note: Only one host connection, front or rear, is allowed at a time.

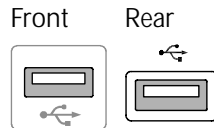


- Press the Save/Recall key.




- Press F5 (More).



- Press F3 (Recall Setup). The display shows the available file sources.

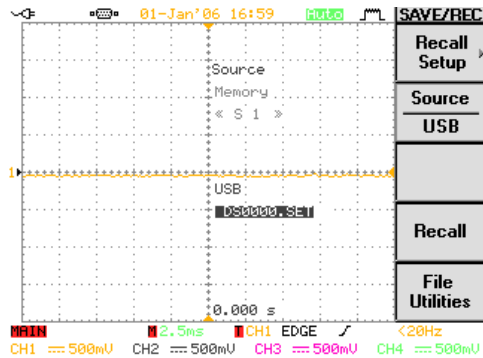


- Press F2 (Source) repeatedly to select the file source, internal memory or external USB. Use the Variable knob to change the memory location (S1 ~ S20) or the file name (DSxxxx.set).

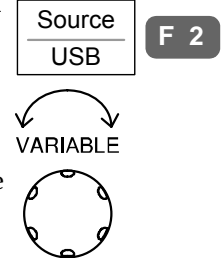

Memory Internal memory, S1 ~ S20
 USB External flash drive, no practical limitation on the amount of file. The setup file must be placed in the root directory to be recognized.

- Press F4 (Recall) to confirm recalling. When completed, a message appears at the bottom of the display.



Setup recalled from S 1

Note The file will not be saved if the power is turned Off or USB drive is taken out before the message.

USB file utility


To edit USB flash drive contents (create/ delete/ rename files and folders), press F5. For details, see page122.



Recall waveform

Panel operation

- (For recalling from an external USB flash drive) Connect the drive to the front or rear panel USB port. Note: Only one host connection, front or rear, is allowed at a time.

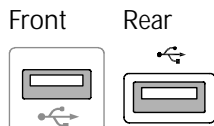


- Press the Save/Recall key.




- Press F5 (More).



- Press F4 (Recall Waveform). The display shows the available source and destination options.

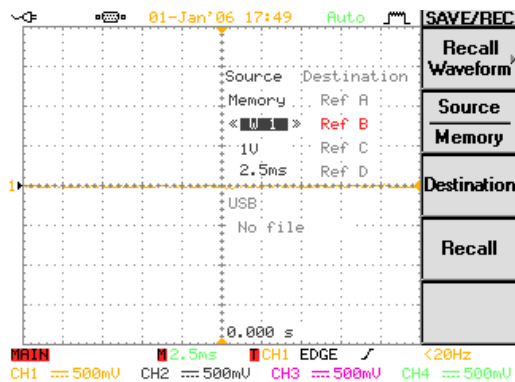


- Press F2 (Source) repeatedly to select the file source, internal memory or external USB. Use the Variable knob to change the memory location (S1 ~ S20) or the file name (DSxxxx.csv).

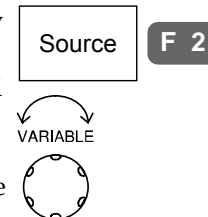


Memory	Internal memory, W1 ~ W20
USB	External flash drive, no practical limitation on the amount of file. The waveform file must be placed in the root directory to be recognized.

- Press F3 (Destination). Use the Variable knob to select the memory location.

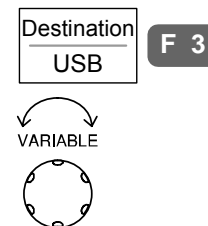


RefA ~ D	Internally stored reference waveforms A ~ D
----------	---

- Press F4 (Save) to confirm recalling. When completed, a message appears at the bottom of the display.



Waveform recalled from W 1

Note  The file will not be saved if the power is turned Off or USB drive is taken out before the message.

USB file utility


To edit USB flash drive contents (create/ delete/ rename files and folders), press F5. For details, see page122.



Recall image

Panel operation

1. Connect the USB drive to the front or rear panel USB port.
Note: Only one host connection, front or rear, is allowed at a time.

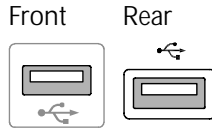



2. Press the Save/Recall key.




3. Press F5 (More).



4. Press F5 (Recall Image). The display shows the available source options.

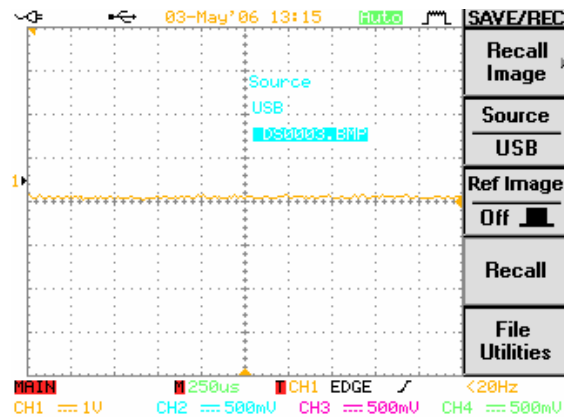


5. To select the source image file, press F2 (Source) and use the Variable knob.



6. To show the image on the display, press F3 (Ref Image) ON or F4 (Recall).



7. The image appears on the display and the "R" indicator appears at the top left corner of the display.

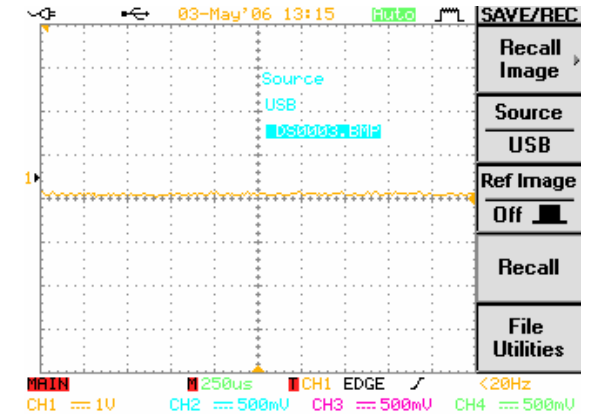

8. To clear the image off the display, press F3 (Ref Image) OFF.



PRINT OUT

Display printout is also available using proprietary PC software, downloadable from GWInstek website.

Overview

Printout step Listed below are the steps that have to be followed when printing out the display image through USB connector.

1. Connect the printer to the USB host port
2. Configure the interface to printout mode
3. Configure the content and printout
4. Printout

1 Connect printer

1. Connect the printer to the USB host port, front or rear panel.

Front panel









Rear panel






USB Note Using the front and rear USB host port at the same time is forbidden (Example: printer to the rear panel, storage device to the front panel).

2 Configure interface

- | | | |
|-----------------|--|---|
| Panel operation | 1. Press the Utility key. |  |
| | 2. Press F2 (Interface menu). |  |
| | 3. Press F1 (Type) repeatedly to select USB. |  |
| | 4. Press F5 (Previous menu). |  |
| | 5. Press F1 (Hardcopy menu). |  |
| | 6. Press F1 (Function) repeatedly to select Printer. |  |

3 Configure content


- | | | |
|-----------------|--|---|
| Panel operation | 1. Press the Utility key. |  |
| | 2. Press F1 (Hardcopy Menu). |  |
| | 3. Press F1 (Function) repeatedly to select Printer if it is not selected yet. |  |

- To invert the color for the saved or printed display image, press F2 (Ink Saver) and turn On the Ink Saver.



Ink Saver On (normal)



Ink Saver Off (inverted)

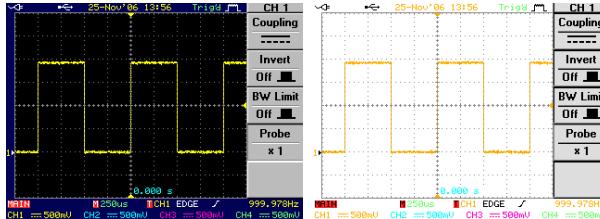

- To select black/white or color printing, press F3 (Portrait) repeatedly; Gray (b&w) or Color.




- To select the printed size, press F4 (Ratio). Use the Parameter knob to change the ratio with respect to the real display size.

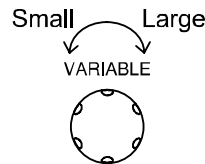

Range 10% ~ 100%

4 Printout

Press the Hardcopy key. The display image is printed out.



REMOTE CONTROL CONFIG






This chapter describes basic configuration of IEEE488.2 based remote control. For command list, refer to the programming manual downloadable from GWInstek website, www.gwinstek.com.tw.

Configuration	Configure USB interface.....	149
	Configure RS-232C interface	150
	Configure GPIB interface (optional)	152
	USB/RS-232C remote control software.....	154

Interface Configuration








Configure USB interface

USB configuration	PC side connector	Type A, host
	GDS-2000 side connector	Type B, slave
	Speed	1.1/2.0 (full speed)

- Panel operation
1. Press the Utility key. 
 2. Press F2 (Interface Menu). 
 3. Press F1 (Type) repeatedly to select USB. 
 4. The interface icon at the top of the display changes into USB type. 
 5. Connect the USB cable to the rear panel slave port. 
 6. When the PC asks for the USB driver, select gds2k_cdc.inf included in the FreeWave software package downloadable from GW website, www.gwinstek.com.tw, GDS-2000 product corner. The driver file automatically sets GDS-2000 as serial port COM7.


Configure RS-232C interface

RS-232C configuration	Connector	DB-9, Male
	Baud rate	2400, 4800, 9600, 19200, 38400
	Parity	None, Odd, Even
	Data bit	8 (fixed)
	Stop bit	1, 2


- Panel operation
1. Press the Utility key. 
 2. Press F2 (Interface Menu). 
 3. Press F1 (Type) repeatedly to select RS-232C. 
 4. The interface icon at the top of the display changes into RS-232C type. 
 5. To change the baud rate, press F2 (Baud Rate) repeatedly. 
Range 2400, 4800, 9600, 19200, 38400
 6. To change the stop bit, press F3 (Stop Bit) repeatedly. 
Range 1, 2
 7. Data bit is fixed at 8.
 8. To change the parity, press F4 (Parity) repeatedly. 

Range None, Odd, Even

9. Connect the RS-232C cable to the rear panel port: DB-9 male connector. For functionality check see page154.

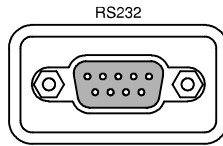


Pin assignment

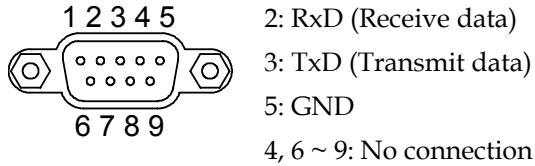

PC connection

Use the Null Modem connection as in the below diagram.

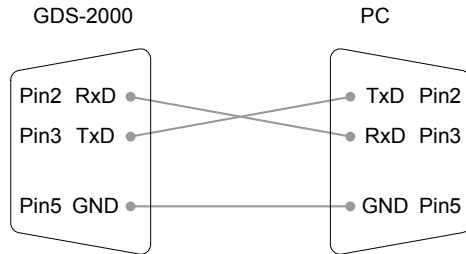

Configure GPIB interface (optional)


GPIB module installation

The optional GPIB module is available as a separate kit. Follow the instruction to install the module properly.


1. Turn Off the GDS-2000 power switch.



2. Take off two screws and remove the rear panel GPIB module cover.

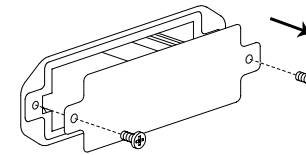

3. Insert the GPIB module and put the screws back.

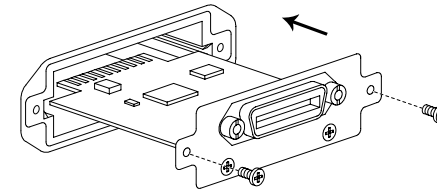

4. Turn On the GDS-2000 power switch.




Configure GPIB


1. Press the Utility key.



2. Press F2 (Interface Menu).



3. Press F1 (Type) repeatedly to select GPIB.



4. The interface icon at display top changes to GPIB.




5. Press F2 (Address). Use the Variable knob to change the GPIB address.



Range 1 ~ 30

6. Connect the GPIB cable to the rear panel port: 24-pin female connector.



- GPIB constraints
- Maximum 15 devices altogether, 20m cable length, 2m between each device
 - Unique address assigned to each device
 - At least 2/3 of the devices turned On
 - No loop or parallel connection

Pin assignment



Pin1	Data line 1	Pin13	Data line 5
Pin2	Data line 2	Pin14	Data line 6
Pin3	Data line 3	Pin15	Data line 7
Pin4	Data line 4	Pin16	Data line 8
Pin5	EOI	Pin17	REN
Pin6	DAV	Pin18	Ground
Pin7	NRFD	Pin19	Ground
Pin8	NDAC	Pin20	Ground
Pin9	IFC	Pin21	Ground
Pin10	SRQ	Pin22	Ground
Pin11	ATN	Pin23	Ground
Pin12	Shield (screen)	Pin24	Signal ground

USB/RS-232C remote control software


Terminal application (USB/RS-232C) Invoke the terminal application such as MTTY (Multi-Threaded TTY). For RS-232C, set the COM port, baud rate, stop bit, data bit, and parity accordingly.
To check the COM port No, see the Device Manager in the PC. For WinXP, Control panel → System → Hardware tab.

Functionality check Run this query command via the terminal.
*idn?
This should return the Manufacturer, Model number, Serial number, and Firmware version in the following format.
GW, GDS-2064, 000000001, V1.00


PC Software (USB only) The proprietary PC software, downloadable from GWInstek website, can be used for remote control. This mode is available only for USB interface.

BATTERY OPERATION


The optional battery allows portable operations such as field applications. Battery packs and related internal components are factory installed items; contact the service center for new installation.

Warning  Never insert or remove the battery while the power is On.

Battery insertion 1. Turn Off the power and take off the power cord.

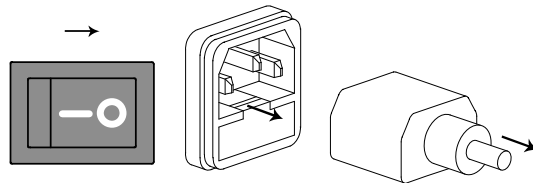

2. Open the rear panel battery pack cover.

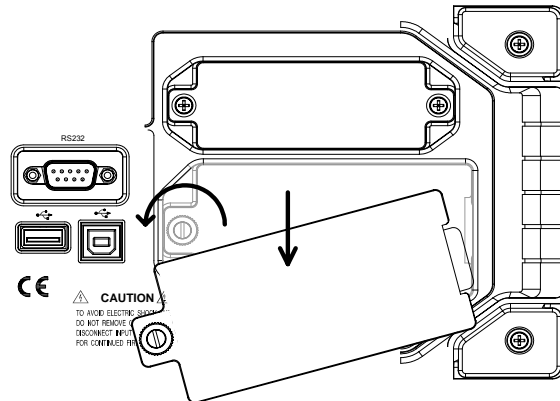

3. Insert the battery packs and close the cover.

4. Turn On the power and make sure the battery icon appears at the top left corner of the display.



Rating	Type	Li-Ion battery x 2, 11.1V average
	Running time	3 hours typical
	Charging time	8 hours typical when Power Off 16 hours typical when Power On


Battery status 1. To view the battery installation and recharge status, press the Utility key.



2. Press F5 (More).



3. Press F2 (System Info).



4. The battery status (output voltage and charging rate) appears on the lower half of the display.

BATTERY INFORMATION		
	BAT. #1	BAT. #2
Voltage:	12.05V	12.04V
Capacity:	98%	94%







Note



- When the battery is not in use for a long time, take them out to prolong the battery life.
- Battery operation requires additional components that are factory installed. Merely inserting battery packs into standard GDS-2000 does not work. For new installation, contact Goodwill.

MAINTENANCE

Two types of maintenance operations are available: calibrate vertical resolution, and compensate the probe. Run these operations when using GDS-2000 in a new environment.


Vertical Resolution Calibration


- Panel operation
1. Press the Utility key. 
 2. Press F5 (More). 
 3. Press F1 (Self Cal Menu). 
 4. Press F1 (Vertical). 
 5. The buzzer sounds and the message "Set CAL to CH1, then press F5" appears at the bottom of the display.
 6. Connect the calibration signal from the rear panel CAL out to Channel1 input. 
 7. Press F5. 
(no menu item)

8. The calibration for Channel1 starts and ends automatically, in less than 5 minutes. 
9. When finished, connect the calibration signal to Channel2 and press F5. Channel2 calibration starts. 
10. (for 4 Channel model only) Repeat the above step for Channel 3 and 4.
11. When the calibration for all channels is completed, the display goes back the default state.

Probe Compensation

- Panel operation
1. Connect the probe between Channel1 input and the probe compensation output (2Vp-p, 1kHz square wave) on the front panel. Set the probe attenuation to x10.

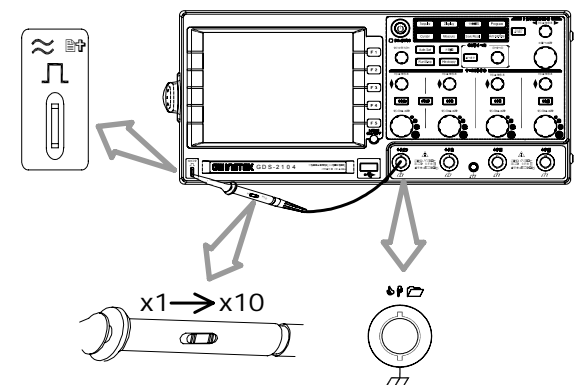

2. Press the Utility key. 

3. Press F5 (More) twice.



4. Press F1 (ProbeComp Menu).




5. Press F1 (Wavetype) repeatedly to select the standard square wave.





6. Press the Auto Set key. The compensation signal appears on the display.



7. Press the Display key, then F1 (Type) twice to select the vector waveform.

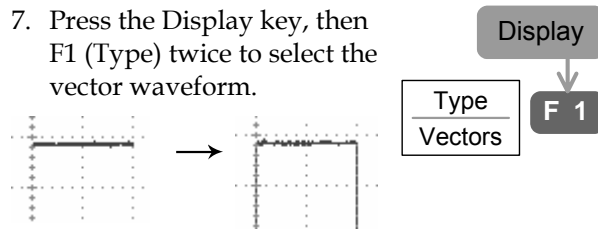

8. Turn the adjustment point on the probe until the signal edge becomes sharp.

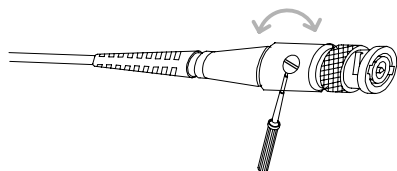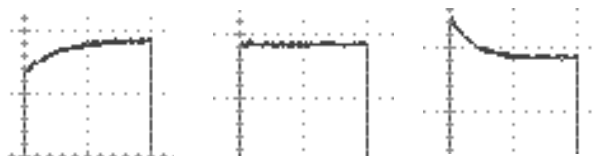

FAQ

- I pressed the Power (On/Standby) key on the front panel but nothing happens.
- I connected the signal but it does not appear on the display.
- I want to remove the (Measurement result / FFT result / Help contents) from the display.
- The waveform does not update (frozen).
- The probe waveform is distorted.
- Auto Set does not catch the signal well.
- I want to clean up the cluttered panel settings.
- The display image printout is too dark on the background.
- I want to install the optional battery pack. I put the battery pack in but it is not working.
- The date and time setting are not correct.
- USB does not work.
- The accuracy does not match the specification.

I pressed the Power (On/Standby) key on the front panel but nothing happens.

Make sure you turned On the rear panel Power switch. For power up sequence, see page22.

I connected the signal but it does not appear on the display.

Make sure you have activated the channel by pressing the Channel key (the LED turns On).

I want to remove the (Measurement result / FFT result / Help contents) from the display.

To clear automatic measurement result, press the Measure key twice, then Press F4 (OFF). See page54 for details.

To clear FFT result, press the Math key twice. See page63 for details.

To clear Help result, press the Help key again. See page45 for details.

The waveform does not update (frozen).

Press the Run/Stop key to unfreeze the waveform. See page49 for details.

If this does not help, the trigger mode might be set to Single. Press the Trigger menu key, then F3 (Mode) to Auto. See page105 for trigger setting details.

The probe waveform is distorted.

You might need to compensate the probe. For details, see page158. Note that the frequency accuracy and duty factor are not specified for probe compensation waveform and therefore it should not be used for other reference purpose.

Auto Set does not catch the signal well.

Autoset function cannot catch signals under 30mV or 30Hz. Please use the manual operation. See page48 for Auto Set details.

I want to clean up the cluttered panel settings.

Recall the default settings by pressing Save/Recall key F1. For default setting contents, see page44.

The display image printout is too dark on the background.

Use the Inksaver function which reverses the background color. For details, see page145.

I want to install the optional battery pack.

I put the battery pack in but it is not working.

The battery pack needs additional internal components to work properly. They are factory installed items: contact your dealer. For battery operation details, see page155.

The date and time setting are not correct.

For date and time setting details, please see page116. If it does not help, the internal battery controlling the clock might be worn out. Contact your dealer or GWInstek.

USB does not work.

Make sure you are not using the front and the rear USB host connector at the same time. Disconnect either of the USB device and try again.

The accuracy does not match the specification.


Make sure the device is powered On for at least 30 minutes, within +20°C~+30°C. This is necessary to stabilize the unit to match the specification.

For more information, contact your local dealer or GWInstek at www.gwinstek.com.tw / marketing@goodwill.com.tw.


APPENDIX

Fuse Replacement

Step 1. Take off the power cord and remove the fuse socket using a minus driver.

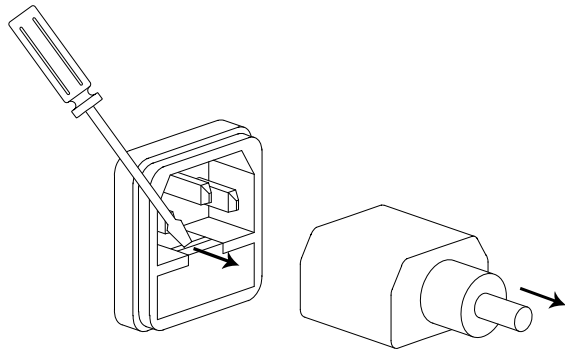

2. Replace the fuse in the holder.

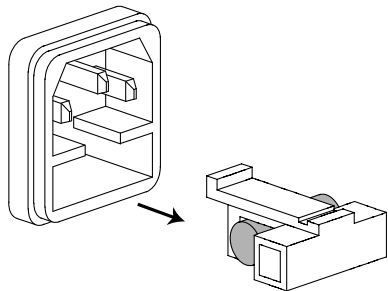


Rating T2A, 250V

GPIB Module Installation


For GPIB interface and remote control details, see page148.

- GPIB kit contents • GPIB module
- Programming manual (programming manual is also downloadable from GWInstek website).


Step 1. Turn Off the GDS-2000 power switch.




2. Take off two screws and remove the rear panel GPIB module cover.

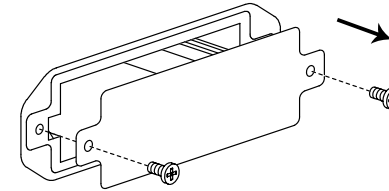

3. Insert the GPIB module and put the screws back.

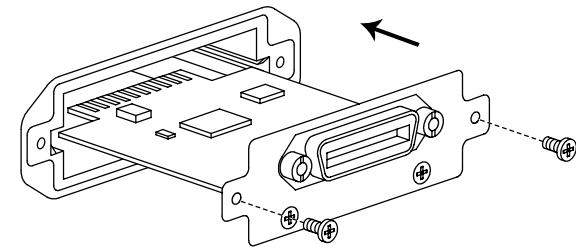

4. Turn On GDS-2000. Press the Utility key, then F2 (Interface) repeatedly. Make sure GPIB menu is selectable, and a GPIB icon appears on the top left corner of the display.

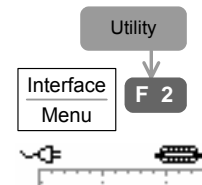

GDS-2000 Specifications

The specifications apply when GDS-2000 is powered on for at least 30 minutes under +20°C~+30°C.

Model-specific

GDS-2062	Channels	2
	Bandwidth	DC ~ 60MHz (-3dB)
	Rise time	5.8ns approx.
GDS-2064	Channels	4
	Bandwidth	DC ~ 60MHz (-3dB)
	Rise time	5.8ns approx.
GDS-2102	Channels	2
	Bandwidth	DC ~ 100MHz (-3dB)
	Rise time	3.5ns approx.
GDS-2104	Channels	4
	Bandwidth	DC ~ 100MHz (-3dB)
	Rise time	3.5ns approx.
GDS-2202	Channels	2
	Bandwidth	DC ~ 200MHz (-3dB)
	Rise time	1.75ns approx.
GDS-2204	Channels	4
	Bandwidth	DC ~ 200MHz (-3dB)
	Rise time	1.75ns approx.

Common

Vertical	Sensitivity	2mV/div-5V/Div (1-2-5 increments)
	Accuracy	± (3% x Readout +0.05div + 0.8mV)
	Input Coupling	AC, DC, Ground
	Input Impedance	1MΩ±2%, ~16pF
	Polarity	Normal & Invert
	Maximum Input	300V (DC+AC peak), CAT II
	Math operation	+, -, FFT
	Offset Range	2mV/div~20mV/div: 0.5V 50mV/div~200mV/div: 5V 500mV/div~2V/div: 50V 5V/div: 300V
	Bandwidth Limit	20MHz (-3dB)

Trigger	Sources	CH1, CH2, Line, EXT(2ch model only), CH3, CH4(4ch model only)
	Modes	Auto-Level, Auto, Normal, Single, TV, Edge, Pulse Width, Time-Delay, Event-Delay(2ch model only)
	Coupling	AC, DC, LFrej, HFrej, Noise rej
	Sensitivity	DC~25MHz: Approx. 0.5div or 5mV 25MHz-max: Approx. 1div or 10mV
External Trigger (2ch model only)	Holdoff	40ns ~ 2.5s
	Range	±15V
	Sensitivity	DC~30MHz: ~50mV 30MHz-max: ~100mV
Horizontal	Input Impedance	1MΩ±2%, ~16pF
	Maximum Input	300V (DC + AC peak), CAT II
	Range	1ns/div~10s/div, 1-2-5 increment Roll mode: 250ms/div ~ 10s/div
X-Y Mode	Modes	Main, Window, Window Zoom, Roll, Scan, X-Y
	Accuracy	±0.01%
	Pre-Trigger	20 div maximum
	Post-Trigger	1000 div
Signal Acquisition	X-Axis Input	Channel 1
	Y-Axis Input	Channel 2
	Phase Shift	±3° at 100kHz
	Real-Time	1G Sa/s maximum
	Equivalent	25G Sa/s maximum
	Vertical Resolution	8 bits
Cursors and Measurement	Record Length	25K Dots Maximum
	Acquisition	Normal, Peak Detect, Average
	Peak Detection	10ns
	Average	2, 4, 8, 16, 32, 64, 128, 256
	Voltage	Vpp, Vamp, Vavg, Vrms, Vhi, Vlo, Vmax, Vmin, Rise Preshoot/ Overshoot, Fall Preshoot/ Overshoot
Cursors	Time	Freq, Period, Rise Time, Fall Time, Positive Width, Negative Width, Duty Cycle
	Delay	FRR, FRF, FFR, FFF, LRR, LRF, LFR, LFF
	Cursors	Voltage difference (ΔV) and Time difference (ΔT) between cursors

	Auto Counter	Resolution: 6 digits Accuracy: $\pm 2\%$ Signal source: All available trigger source except the Video trigger
Control Panel Function	Auto Set	Automatically adjust Vertical Volt/div, Horizontal Time/div, and Trigger level
	Save Setup	Internal memory: 20 sets USB Flash drive: unlimited
	Save Waveform	Internal memory: 20 sets USB Flash drive: unlimited
	Save display image	USB Flash drive: unlimited
Display	LCD	5.6 inch, TFT, brightness adjustable
	Resolution	234 (Vertical) x 320 (Horizontal) (dots)
	Graticule	8 x 10 divisions (menu On) 8 x 12 divisions (menu Off)
Interface	Go-No Go Output	5V max/ 10mA TTL open collector
	RS-232C	DTE DB 9-pin male
	GPIO (Optional)	IEEE488.2 24-pin female
	USB	Host: Flash drive, Printer Device: Remote control 2.0 full speed supported
Power Source	Line Voltage	100V~240V AC, 47Hz~63Hz
	Battery (Optional)	Li-Ion pack, 11.1V average 8 hours charge time (Power On) 3 hours operating time (depend on conditions)
Miscellaneous	Language Selection	English, Traditional Chinese, Simplified Chinese, others (depend on the region)
	On-Line Help	Available for most keys
	Real-Time Clock	Display: yy/mm/dd/hh/ss (time stamp for saved data)
Operation Environment	Ambient temperature 0 ~ 50°C Relative humidity $\leq 80\%$ @35°C	
Storage Environment	Ambient temperature -20 ~ 70°C Relative humidity $\leq 90\%$ @35°C	
Dimensions	254 (D) x 142 (H) x 310 (W) mm	
Weight	Approx. 4.3kg	

Probe Specifications

Model-specific

GTP-060A-2	Applicable to Bandwidth Rise time	GDS-2062, GDS-2064 DC ~ 60MHz @ Position x 10 5.8ns
GTP-100A-2	Applicable to Bandwidth Rise time	GDS-2102, GDS-2104 DC ~ 100MHz @ Position x 10 2.3ns
GTP-250A-2	Applicable to Bandwidth Rise time	GDS-2202, GDS-2204 DC ~ 250MHz @ Position x 10 1.4ns

Common

Position x 10	Attenuation Ratio	10:1
	Input Resistance	10M Ω when used with 1M Ω input oscilloscope
	Input Capacitance	23pF approx. for GTP-060A-2 15pF approx. for GTP-100A-2 17pF approx. for GTP-250A-2
	Compensation Range	10 ~ 35pF
	Maximum Input Voltage	500V CAT I, 300V CAT II (DC+Peak AC) Derating with frequency
	Attenuation Ratio	1:1
Position x 1	Bandwidth	DC ~ 6MHz
	Rise Time	58ns
	Input Resistance	1M Ω when used with 1M Ω input oscilloscope
	Input Capacitance	128pF for GTP-060A-2, 47pF for GTP-100A-2, 47pF for GTP-250A-2 (+ oscilloscope capacitance)
	Compensation Range	10 ~ 35pF
	Maximum Input Voltage	300V CAT I, 150V CAT II (DC+Peak AC) Derating with frequency
Operating Condition	Temperature	-10°C ~ 55°C
	Relative Humidity	$\leq 85\%$ @35°C
Safety Standard	EN61010-031 CAT II	

Declaration of Conformity

We

GOOD WILL INSTRUMENT CO., LTD.

(1) No.7-1, Jhongsing Rd., Tucheng City, Taipei County, Taiwan

(2) No. 69, Lu San Road, Suzhou City (Xin Qu), Jiangsu Sheng, China

declare, that the below mentioned product

Type of Product: Power Supply

Model Number: GDS-2062, GDS-2064, GDS-2102, GDS-2104,

GDS-2202, GDS-2204

are herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Law of Member States relating to Electromagnetic Compatibility (89/336/EEC, 92/31/EEC, 93/68/EEC) and Low Voltage Directive (73/23/EEC, 93/68/EEC).

For the evaluation regarding the Electromagnetic Compatibility and Low Voltage Directive, the following standards were applied:

EMC

EN 61326-1: Electrical equipment for measurement, control and laboratory use -- EMC requirements (1997 + A1:1998 + A2:2001 + A3:2003)	
Conducted Emission	Electrical Fast Transients
Radiated Emission	EN 61000-4-4: 2004
EN 55011: Class A 1998 + A1:1999 + A2:2002	
Current Harmonics	Surge Immunity
EN 61000-3-2: 2000 + A2:2005	EN 61000-4-5: 1995 + A1:2001
Voltage Fluctuations	Conducted Susceptibility
EN 61000-3-3: 1995 + A1:2001 + A2:2005	EN 61000-4-6: 1996 + A1:2001
Electrostatic Discharge	Power Frequency Magnetic Field
EN 61000-4-2: 1995 + A1:1998 + A2:2001	EN 61000-4-8: 1993 + A1:2001
Radiated Immunity	Voltage Dip/ Interruption
EN 61000-4-3: 2002 + A1:2002	EN 61000-4-11: 2004

Safety

Low Voltage Equipment Directive 73/23/EEC & amended by 93/68/EEC
Safety Requirements
IEC/EN 61010-1: 2001

INDEX

2-4 channel difference.....	10	coupling mode	102
AC coupling.....	102	menu tree	27
acquisition	84	cursor.....	59
menu tree	26	menu tree	27
addition.....	64	shortcut	27
menu tree	29	specification.....	166
auto level	108	cycle time measure	55
auto set.....	48	date setting	116
effect on channel.....	47	faq.....	162
exception	48	indicator	20
faq.....	161	menu tree	43
specification.....	167	DC coupling	102
auto template	74	declaration of conformity	169
auto trigger	106	default setup.....	136
automatic measurement	56	contents	44
faq.....	161	effect on channel.....	47
menu tree	30	menu tree	32
overview	54	delay measure	55
shortcut	30	delay trigger	110
specification.....	166	menu tree	37
average acquisition.....	84	display	92
average voltage measure.....	55	contrast setting.....	92
bandwidth limitation	103	diagram	19
battery	155	grid setting.....	93
faq.....	162	menu tree	28
icon on power up.....	22	save image	131
specification	167	shortcut	28
blackman window	64	specification.....	167
buzzer	69	dot waveform	90
menu tree	39	download information	12
calibration, vertical resolution	157	duty cycle measure	55
caution symbol.....	5	ECL	107
channel.....	47	edge trigger.....	109
faq.....	160	menu tree	37
menu tree	27	EN61010	169
shortcut	27	measurement category	6
status indicator.....	20	pollution degree.....	7
cleaning the instrument.....	7	environment	167

safety instruction	7
equivalent time sampling	89
external trigger	106
input terminal	16
specification	166
falling time measure	55
FFT	66
horizontal cursor	60
menu tree	29
overview	63
vertical cursor	62
file format	119
firmware version	115
flattop window	64
FM example	87
frequency measure	55
front panel diagram	13
fuse replacement	163
safety instruction	7
generic purpose signal	52
go-nogo	68
how to configure	69
how to run	75
menu tree	41
output specification	167
output terminal	76
template menu tree	41
GPIO	152
module installation	164
ground	
coupling	102
symbol	5
terminal	16
hanning window	63
hardcopy	125
menu tree	40
shortcut	40
help	45
faq	161
high voltage measure	54
holdoff	108
horizontal	94
basic operation	50
cursor menu tree	27
cursor operation	59
menu tree	28
position	94
scale	95
shortcut	28
specification	166
IEC 1010-1	168
initialization	23
ink saver	
in display save	132
in hardcopy	126
in save all	134
input frequency indicator	20
interface	149
menu tree	40
specification	167
invert waveform	103
language selection	115
list of features	11
long memory	87
low voltage measure	54
math	63
faq	161
menu tree	29
shortcut	29
memory length	86
menu on/off	93
min/max template	72
model difference	10
normal acquisition	84
normal trigger	106
NTSC	107
overshoot voltage measure	55
package contents	12
PAL	107
pc software download	12
peak detect acquisition	84
peak voltage measure	54
power on/off	22
faq	160
safety instruction	6
switch overview	17
preshoot voltage measure	55
printout	
faq	162
menu tree	40
probe	158
attenuation level	104
attenuation menu tree	27

compensation menu tree	42
compensation signal overview	52
faq	161
memory length demonstration	88
package list	12
peak detect demonstration	85
specification	168
program	77
how to edit	78
how to run	80
menu tree	31
shortcut	31
program manual download	12
pulse time measure	55
pulse width trigger	113
menu tree	37
real time sampling	89
rear panel diagram	17
recall	136
default setup	136
menu tree	32
reference waveform	138
setup	139
shortcut	32
waveform	141
rectangular window	64
reference waveform	
how to recall	138
menu tree	32
remote control	148
interface configuration	149
rising time measure	55
roll mode	97
RS-232C interface	150
run/stop	49
faq	161
horizontal position	94
horizontal scale	95
save	127
display image	131
menu tree	32
save all	133
setup	128
shortcut	32
specification	167
waveform	129
scan mode	96
SECAM	107
serial number	115
service operation	
about disassembly	6
contact	162
setup	
default contents	44
file format	121
how to recall	139
how to save	128
menu tree	33
recall menu tree	34, 35
short memory	87
single trigger mode	106
faq	161
with run/stop	49
spike noise example	87
stop icon	49
subtraction	64
menu tree	29
system information	115
battery	156
template for go-nogo	71
tilt stand	21
time setting	116
faq	162
indicator	20
menu tree	43
trigger	105
delay	110
edge	109
menu tree	36
parameter	106
pulse width	113
shortcut	36
single trigger with run/stop	49
specification	166
status indicator	20
video	112
TTL	107
UK power cord	8
USB	
driver download	12
faq	162
file menu tree	36
file operation	122
PC software download	154
remote control interface	149
utility	

key overview	14	waveform	
menu tree	39	accumulation.....	91
shortcut	39	file contents.....	120
vector waveform.....	90	how to recall.....	141
vertical.....	101	how to save.....	129
basic operation.....	51	invert waveform	103
cursor menu tree.....	27	recall menu tree	34, 35
cursor operation.....	61	roll mode.....	97
position.....	101	scan mode.....	96
resolution calibration.....	157	x-y mode	99
scale.....	101	zoom mode.....	98
specification.....	165	waveform color	19
video line	107	x-y mode.....	99
video trigger	112	specification.....	166
menu tree	36	zoom waveform	98
warning symbol	5		